











Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2006	Sprinter	906 (VW LT3)	Air conditioning	ZHZ-Heater booster	●	●	●	●	●	●	●	
As of 01/2006	Sprinter	906 (VW LT3)	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
From 2002 to 2006	Sprinter	90x.6; 690.6	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F084 F085 F002 F086 F087 F088 F089 F08A F08B F08C F08D F08E F08F F090 F091 F092 F093 F094 F095 F096 F097 F098 F099 F09A F09B F09C F09D F09E
From 2002 to 2006	Sprinter	90x.6; 690.6	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F002 F09F F0A0 F085
From 2002 to 2006	Sprinter	90x.6; 690.6	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	
From 2002 to 2005	VANEO	414	Drive	ECM-Engine control monolith	●	●	○	●	●	※	●	F016 F0C4 F0C5
From 2002 to 2005	VANEO	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F0C6
From 2002 to 2005	VANEO	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F0C7 F0C8 F0C9 F0CA F0CB F0CC F0CD F0CE F0CF F0D0 F0D1 F0D2 F0D3 F0D4 F0D5 F0D6 F0D7 F0D8
From 2002 to 2005	VANEO	414	Body	ABW-Airbag with window airbag	○	○	○	○	○	※	○	
From 2002 to 2005	VANEO	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	F0D9 F0DA F0DB F0DC F0DD F0BD F0DE F0DF F0E0
From 2002 to 2005	VANEO	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	COMAND	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to 2005	VANEO	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to 2005	VANEO	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	F0E1
From 2002 to 2005	VANEO	414	Air conditioning	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Air conditioning	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2002 to 2005	VANEO	414	Drive	ECM-Engine control monolith	●	●	○	●	●	※	●	F016 F0C4 F0C5
From 2002 to 2005	VANEO	414	Drive	ACS-Automatic clutch system	●	●	○	●	●	※	●	F0E2 F0E3 F0E4
From 2002 to 2005	VANEO	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F0C6
From 2002 to 2005	VANEO	414	Body	ABW-Airbag with window airbag	○	○	○	○	○	※	○	
From 2002 to 2005	VANEO	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F0C7 F0C8 F0C9 F0CA F0CB F0CC F0CD F0CE F0CF F0D0 F0D1 F0D2 F0D3 F0D4 F0D5 F0D6 F0D7 F0D8
From 2002 to 2005	VANEO	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	F0D9 F0DA F0DB F0DC F0DD F0BD F0DE F0DF F0E0
From 2002 to 2005	VANEO	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	COMAND	●	●	○	●	●	●	○	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to 2005	VANEO	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to 2005	VANEO	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	F0E1
From 2002 to 2005	VANEO	414	Air conditioning	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Air conditioning	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2002 to 2005	VANEO	414	Drive	ECM-Engine control monolith	●	●	○	●	●	※	●	F016 F0C4 F0C5
From 2002 to 2005	VANEO	414	Drive	FTC-Front transmission control	●	●	○	●	●	※	●	F0E5 F0E6 F0E7 F0E8 F0E9 F0EA F0EB F0EC
From 2002 to 2005	VANEO	414	Drive	FTC-Front transmission control	●	●	○	●	●	●	○	F0ED F0EE F0E6 F0E7 F0EF
From 2002 to 2005	VANEO	414	Drive	ESM-Electronic selector module	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F0C6
From 2002 to 2005	VANEO	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F0C7 F0C8 F0C9 F0CA F0CB F0CC F0CD F0CE F0CF F0D0 F0D1 F0D2 F0D3 F0D4 F0D5 F0D6 F0D7 F0D8
From 2002 to 2005	VANEO	414	Body	ABW-Airbag with window airbag	○	○	○	○	○	※	○	
From 2002 to 2005	VANEO	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	F0D9 F0DA F0DB F0DC F0DD F0BD F0DE F0DF F0E0
From 2002 to 2005	VANEO	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	



Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to 2005	VANEO	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	COMAND	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to 2005	VANEO	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	F0E1
From 2002 to 2005	VANEO	414	Air conditioning	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Air conditioning	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2002 to 2005	VANEO	414	Drive	CDI-Common Rail Diesel Injection	●	●	○	●	●	※	●	F0F0 F0EC F0F1 F0F2 F01A
From 2002 to 2005	VANEO	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F0C6
From 2002 to 2005	VANEO	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F0C7 F0C8 F0C9 F0CA F0CB F0CC F0CD F0CE F0CF F0D0 F0D1 F0D2 F0D3 F0D4 F0D5 F0D6 F0D7 F0D8
From 2002 to 2005	VANEO	414	Body	ABW-Airbag with window airbag	○	○	○	○	○	※	○	
From 2002 to 2005	VANEO	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	F0D9 F0DA F0DB F0DC F0DD F0BD F0DE F0DF F0E0
From 2002 to 2005	VANEO	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to 2005	VANEO	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	COMAND	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to 2005	VANEO	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	FOE1
From 2002 to 2005	VANEO	414	Air conditioning	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Air conditioning	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2002 to 2005	VANEO	414	Drive	CDI-Common Rail Diesel Injection	●	●	○	●	●	※	●	FOF0 F0EC F0F1 F0F2 F01A
From 2002 to 2005	VANEO	414	Drive	ACS-Automatic clutch system	●	●	○	●	●	※	●	FOE2 FOE3 FOE4
From 2002 to 2005	VANEO	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F0C6
From 2002 to 2005	VANEO	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F0C7 F0C8 F0C9 F0CA F0CB F0CC F0CD F0CE F0CF F0D0 F0D1 F0D2 F0D3 F0D4 F0D5 F0D6 F0D7 F0D8
From 2002 to 2005	VANEO	414	Body	ABW-Airbag with window airbag	○	○	○	○	○	※	○	
From 2002 to 2005	VANEO	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	F0D9 F0DA F0DB F0DC F0DD F0BD F0DE F0DF F0E0

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to 2005	VANEO	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	COMAND	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to 2005	VANEO	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	FOE1
From 2002 to 2005	VANEO	414	Air conditioning	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Air conditioning	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2002 to 2005	VANEO	414	Drive	CDI-Common Rail Diesel Injection	●	●	○	●	●	※	●	FOF0 F0EC F0F1 F0F2 F01A
From 2002 to 2005	VANEO	414	Drive	FTC-Front transmission control	●	●	○	●	●	※	●	FOE5 FOE6 FOE7 FOE8 FOE9 FOEA FOEB FOEC
From 2002 to 2005	VANEO	414	Drive	FTC-Front transmission control	●	●	○	●	●	●	○	FOED FOEE FOE6 FOE7 FOEF
From 2002 to 2005	VANEO	414	Drive	ESM-Electronic selector module	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	FOC6
From 2002 to 2005	VANEO	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	FOC7 FOC8 FOC9 FOCA FOCB FOCC F0CD FOCE FOCF FOD0 FOD1 FOD2 FOD3 FOD4 FOD5 FOD6 FOD7 FOD8

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to 2005	VANEO	414	Body	ABW-Airbag with window airbag	○	○	○	○	○	※	○	
From 2002 to 2005	VANEO	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	FOD9 FODA FODB FODC FODD FOBD FODE FODF FOEO
From 2002 to 2005	VANEO	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	COMAND	●	●	○	●	●	●	○	
From 2002 to 2005	VANEO	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
From 2002 to 2005	VANEO	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to 2005	VANEO	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	FOE1
From 2002 to 2005	VANEO	414	Air conditioning	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to 2005	VANEO	414	Air conditioning	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
As of 01/2006	VITO	638	Drive	ME-SFI 2.1-Motor electronics 2.1	●	●	○	●	○	※	○	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2006	VITO	638	Drive	Control unit ME motor electronics(CNG compressed natural gas)	●	●	○	●	●	※	○	F082
As of 01/2006	VITO	638	Drive	CDI1-Common Rail Diesel Injection	●	●	○	●	○	※	○	
As of 01/2006	VITO	638		WSP immobilizer	●	●	○	●	●	○	○	
As of 01/2008	VITO/VIANO	639	Drive	ME-SFI 2.8-Motor electronics 2.8	●	●	○	●	●	●	●	F0C4 F001 F0F2 F0F3 F063 F0F4 F0F5 F0C5
As of 01/2008	VITO/VIANO	639	Drive	EGS electronic transmission control	○	○	○	○	○	●	○	
As of 01/2008	VITO/VIANO	639	Drive	ESM-Electronic selector module	●	●	○	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Chassis	ESP-Electronic stability program	●	●	○	●	●	●	●	F0F6 F0F7 F0F8 F0F9 F0FA F0FB F01A
As of 01/2008	VITO/VIANO	639	Chassis	ESP-Electronic stability program	●	●	●	●	●	●	●	F0FC F0FD F06E F0FE F0FF F100 F101 F102 F103 F073
As of 01/2008	VITO/VIANO	639	Chassis	TPC-Tire pressure monitor	●	●	●	●	●	●	●	F104 F07C F07D F016 F105
As of 01/2008	VITO/VIANO	639	Chassis	ENR-Electronic rear axle level control	●	●	○	●	○	●	●	F106 F07F
As of 01/2008	VITO/VIANO	639	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F107 F108 F109 F10A F10B F10C F10D F107
As of 01/2008	VITO/VIANO	639	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F10E F082 F083 F108
As of 01/2008	VITO/VIANO	639	Body	CGW-Central gateway	●	●	●	●	○	●	○	F0F1
As of 01/2008	VITO/VIANO	639	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F08C F10F F08D F110 F111 F112 F113 F114 F115 F08F F116
As of 01/2008	VITO/VIANO	639	Body	SAM-Signal acquisition and actuation module	●	●	○	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Body	UCP-Upper control panel	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Body	OCP-Overhead control panel	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Body	SDE-H-Rear sliding roof unit	●	●	○	●	●	○	●	F117 F118 F119
As of 01/2008	VITO/VIANO	639	Body	AHE-Trailer recognition	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Body	AAG-Trailer connection unit	●	●	●	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Information and communication	IC-Instrument cluster	●	●	○	●	●	○	●	F11A F11B F0DB F0D9 F11C F11D F0BD F11E F11F F120 F121 F122 F123 F124 F125 F126 F0EE F127 F128

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIANO	639	Information and communication	IC-Instrument cluster	●	●	○	●	●	●	●	F129 F0DB F12A F12B
As of 01/2008	VITO/VIANO	639	Information and communication	PTS-Parktronic system	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Information and communication	RADIO Sound 5	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	COMAND	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	HRA-Headlamp range adjustment	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
As of 01/2008	VITO/VIANO	639	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
As of 01/2008	VITO/VIANO	639	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
As of 01/2008	VITO/VIANO	639	Information and communication	VCS-Voice control system	●	●	○	●	●	○	○	
As of 01/2008	VITO/VIANO	639	Information and communication	TV-TV tuner	●	●	○	●	●	●	○	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIANO	639	Information and communication	NAVI-Navigation system (COMAND, SOUND 50)	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	RADIO Sound 20	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	SOUND 5NG	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	CDW-CD changer	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	TEL-Telephone control unit	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	AVN-Headlamp range adjustment	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Seats and doors	DCM-FL-Door control module front left	●	●	○	●	●	●	●	F12C
As of 01/2008	VITO/VIANO	639	Seats and doors	DCM-FR-Door control module front right	●	●	○	●	●	●	●	F12D
As of 01/2008	VITO/VIANO	639	Seats and doors	STE-R-ESD [STE] Right electric sliding door	●	●	○	●	●	●	●	F12E F12F F130
As of 01/2008	VITO/VIANO	639	Seats and doors	STE-L-ESD [STE] Left electric sliding door	●	●	○	●	●	●	●	F12E F12F F130
As of 01/2008	VITO/VIANO	639	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	●	●	○	●	●	○	●	F131 F132 F133 F134 F135
As of 01/2008	VITO/VIANO	639	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	●	●	○	●	●	○	●	F131 F132 F133 F134 F135
As of 01/2008	VITO/VIANO	639	Air conditioning	REAR AC-Rear air conditioning	●	●	●	●	●	●	●	F136
As of 01/2008	VITO/VIANO	639	Air conditioning	AAC-Automatic air conditioning	●	●	○	●	●	●	●	F137

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIANO	639	Air conditioning	STH-Stationary heater	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	○	●	●	
As of 01/2008	VITO/VIANO	639	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Drive	CDI-Common Rail Diesel Injection	●	●	●	●	●	●	●	F005 F007 F008 F001 F138 F00C F139 F13A F13B F13C F13D F13E F0F1 FOEC
As of 01/2008	VITO/VIANO	639	Drive	CDI-Common Rail Diesel Injection	●	●	●	●	●	●	●	F005 F007 F008 F001 F138 F00C F139 F13A F13B F13C F13D F13E F0F1 FOEC
As of 01/2008	VITO/VIANO	639	Drive	CDI4-Common Rail Diesel Injection	●	●	●	●	●	●	●	F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010 F011 F012 F013 F014 F015 F016 F017 F018 F004 F019
As of 01/2008	VITO/VIANO	639	Drive	CDI4-Common Rail Diesel Injection	●	●	●	●	●	●	●	F005 F006 F007 F008 F001 F009 F00A F00B F00C F00D F018 F016 F004 F019
As of 01/2008	VITO/VIANO	639	Chassis	ESP-Electronic stability program	●	●	○	●	●	●	●	F0F6 F0F7 F0F8 F0F9 F0FA F0FB F01A
As of 01/2008	VITO/VIANO	639	Chassis	ESP-Electronic stability program	●	●	●	●	●	●	●	F0FC F0FD F06E F0FE F0FF F100 F101 F102 F103 F073
As of 01/2008	VITO/VIANO	639	Chassis	TPC-Tire pressure monitor	●	●	●	●	●	●	●	F104 F07C F07D F016 F105
As of 01/2008	VITO/VIANO	639	Chassis	ENR-Electronic rear axle level control	●	●	○	●	○	●	●	F106 F07F
As of 01/2008	VITO/VIANO	639	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F107 F108 F109 F10A F10B F10C F10D F107
As of 01/2008	VITO/VIANO	639	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F10E F082 F083 F108
As of 01/2008	VITO/VIANO	639	Body	CGW-Central gateway	●	●	●	●	○	●	○	F0F1
As of 01/2008	VITO/VIANO	639	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F08C F10F F08D F110 F111 F112 F113 F114 F115 F08F F116
As of 01/2008	VITO/VIANO	639	Body	SAM-Signal acquisition and actuation module	●	●	○	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Body	UCP-Upper control panel	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Body	OCP-Overhead control panel	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Body	SDE-H-Rear sliding roof unit	●	●	○	●	●	○	●	F117 F118 F119
As of 01/2008	VITO/VIANO	639	Body	AHE-Trailer recognition	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Body	AAG-Trailer connection unit	●	●	●	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Information and communication	IC-Instrument cluster	●	●	○	●	●	○	●	F11A F11B F0DB F0D9 F11C F11D F0BD F11E F11F F120 F121 F122 F123 F124 F125 F126 F0EE F127 F128







Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIANO	639	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	○	●	●	
As of 01/2008	VITO/VIANO	639	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Drive	CDI-Common Rail Diesel Injection	●	●	●	●	●	●	●	F005 F007 F008 F001 F138 F00C F139 F13A F13B F13C F13D F13E F0F1 FOEC
As of 01/2008	VITO/VIANO	639	Drive	CDI-Common Rail Diesel Injection	●	●	●	●	●	●	●	F005 F007 F008 F001 F138 F00C F139 F13A F13B F13C F13D F13E F0F1 FOEC
As of 01/2008	VITO/VIANO	639	Drive	CDI4-Common Rail Diesel Injection	●	●	●	●	●	●	●	F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010 F011 F012 F013 F014 F015 F016 F017 F018 F004 F019
As of 01/2008	VITO/VIANO	639	Drive	CDI4-Common Rail Diesel Injection	●	●	●	●	●	●	●	F005 F006 F007 F008 F001 F009 F00A F00B F00C F00D F018 F016 F004 F019
As of 01/2008	VITO/VIANO	639	Drive	EGS electronic transmission control	○	○	○	○	○	●	○	
As of 01/2008	VITO/VIANO	639	Drive	EGS Electronic transmission control	○	○	○	○	○	●	○	
As of 01/2008	VITO/VIANO	639	Drive	EGS Electronic transmission control	●	●	○	●	●	●	●	FOE6 F13F F140 F141 F142 F143 F144 F145 F146 F147 F148 F149 F14A F14B F14C F14D F01A
As of 01/2008	VITO/VIANO	639	Drive	ESM-Electronic selector module	●	●	○	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Chassis	ESP-Electronic stability program	●	●	○	●	●	●	●	F0F6 F0F7 F0F8 F0F9 FOFA F0FB F01A
As of 01/2008	VITO/VIANO	639	Chassis	ESP-Electronic stability program	●	●	●	●	●	●	●	F0FC F0FD F06E FOFE FOFF F100 F101 F102 F103 F073
As of 01/2008	VITO/VIANO	639	Chassis	TPC-Tire pressure monitor	●	●	●	●	●	●	●	F104 F07C F07D F016 F105
As of 01/2008	VITO/VIANO	639	Chassis	ENR-Electronic rear axle level control	●	●	○	●	○	●	●	F106 F07F
As of 01/2008	VITO/VIANO	639	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F107 F108 F109 F10A F10B F10C F10D F107
As of 01/2008	VITO/VIANO	639	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F10E F082 F083 F108
As of 01/2008	VITO/VIANO	639	Body	CGW-Central gateway	●	●	●	●	○	●	○	F0F1
As of 01/2008	VITO/VIANO	639	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F08C F10F F08D F110 F111 F112 F113 F114 F115 F08F F116
As of 01/2008	VITO/VIANO	639	Body	SAM-Signal acquisition and actuation module	●	●	○	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Body	UCP-Upper control panel	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Body	OCP-Overhead control panel	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Body	SDE-H-Rear sliding roof unit	●	●	○	●	●	○	●	F117 F118 F119
As of 01/2008	VITO/VIANO	639	Body	AHE-Trailer recognition	●	●	○	●	●	○	●	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIANO	639	Body	AAG-Trailer connection unit	●	●	●	●	●	○	●	
As of 01/2008	VITO/VIANO	639	Information and communication	IC-Instrument cluster	●	●	○	●	●	○	●	F11A F11B F0DB F0D9 F11C F11D F0BD F11E F11F F120 F121 F122 F123 F124 F125 F126 F0EE F127 F128
As of 01/2008	VITO/VIANO	639	Information and communication	IC-Instrument cluster	●	●	○	●	●	●	●	F129 F0DB F12A F12B
As of 01/2008	VITO/VIANO	639	Information and communication	PTS-Parktronic system	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Information and communication	RADIO Sound 5	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	COMAND	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
As of 01/2008	VITO/VIANO	639	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
As of 01/2008	VITO/VIANO	639	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
As of 01/2008	VITO/VIANO	639	Information and communication	VCS-Voice control system	●	●	○	●	●	○	○	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIANO	639	Information and communication	TV-TV tuner	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	NAVI-Navigation system (COMAND, SOUND 50)	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	RADIO Sound 20	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	SOUND 5NG	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	CDW-CD changer	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Information and communication	TEL-Telephone control unit	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIANO	639	Seats and doors	DCM-FL-Door control module front left	●	●	○	●	●	●	●	F12C
As of 01/2008	VITO/VIANO	639	Seats and doors	DCM-FR-Door control module front right	●	●	○	●	●	●	●	F12D
As of 01/2008	VITO/VIANO	639	Seats and doors	STE-R-ESD [STE] Right electric sliding door	●	●	○	●	●	●	●	F12E F12F F130
As of 01/2008	VITO/VIANO	639	Seats and doors	STE-L-ESD [STE] Left electric sliding door	●	●	○	●	●	●	●	F12E F12F F130
As of 01/2008	VITO/VIANO	639	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	●	●	○	●	●	○	●	F131 F132 F133 F134 F135
As of 01/2008	VITO/VIANO	639	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	●	●	○	●	●	○	●	F131 F132 F133 F134 F135
As of 01/2008	VITO/VIANO	639	Air conditioning	REAR AC-Rear air conditioning	●	●	●	●	●	●	●	F136
As of 01/2008	VITO/VIANO	639	Air conditioning	AAC-Automatic air conditioning	●	●	○	●	●	●	●	F137

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIANO	639	Air conditioning	STH-Stationary heater	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Air conditioning	PTC-Heater booster	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Air conditioning	PTC-Heater booster	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIANO	639	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	○	●	●	
As of 01/2008	VITO/VIANO	639	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639	Drive	ME-SFI 2.8-Motor electronics 2.8	●	●	○	●	●	●	●	F0C4 F001 F0F2 F0F3 F063 F0F4 F0F5 F0C5
From 2004 to 2007	VANEO	639	Drive	ME 97-Motor electronics 9.7	●	●	●	●	●	●	●	F050 F051 F004 F052 F030 F053 F054 F055 F056 F057 F058 F059 F05A F05B F05C F05D F05E
From 2004 to 2007	VANEO	639	Drive	CDI-Common Rail Diesel Injection	●	●	●	●	●	●	●	F005 F007 F008 F001 F138 F00C F139 F13A F13B F13C F13D F13E F0F1 F0EC
From 2004 to 2007	VANEO	639	Drive	CDI-Common Rail Diesel Injection	●	●	●	●	●	●	●	F005 F007 F008 F001 F138 F00C F139 F13A F13B F13C F13D F13E F0F1 F0EC
From 2004 to 2007	VANEO	639	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F08C F10F F08D F110 F111 F112 F113 F114 F115 F08F F116
From 2004 to 2007	VANEO	639	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F114 F115 F08C F08D F08E F08F F14E
From 2004 to 2007	VANEO	639_MO8	Drive	ME 97-Motor electronics 9.7	●	●	●	●	●	●	●	F050 F051 F004 F052 F030 F053 F054 F055 F056 F057 F058 F059 F05A F05B F05C F05D F05E
From 2004 to 2007	VANEO	639_MO8	Drive	ME-SFI 2.8-Motor electronics 2.8	●	●	○	●	●	●	●	F0C4 F001 F0F2 F0F3 F063 F0F4 F0F5 F0C5
From 2004 to 2007	VANEO	639_MO8	Drive	EGS Electronic transmission control	○	○	○	○	○	●	○	
From 2004 to 2007	VANEO	639_MO8	Drive	EGS electronic transmission control	○	○	○	○	○	●	○	
From 2004 to 2007	VANEO	639_MO8	Drive	ESM-Electronic selector module	●	●	○	●	●	●	●	
From 2004 to 2007	VANEO	639_MO8	Drive	FSCU-Fuel pump	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_MO8	Chassis	ESP-Electronic stability program	●	●	●	●	●	●	●	F0FC F0FD F06E F0FE F0FF F100 F101 F102 F103 F073
From 2004 to 2007	VANEO	639_MO8	Chassis	TPC-Tire pressure monitor	●	●	●	●	●	●	●	F104 F07C F07D F016 F105
From 2004 to 2007	VANEO	639_MO8	Chassis	ENR-Electronic rear axle level control	●	●	○	●	○	●	●	F106 F07F
From 2004 to 2007	VANEO	639_MO8	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F10E F082 F083 F108
From 2004 to 2007	VANEO	639_MO8	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F10E F082 F083 F108



Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2004 to 2007	VANEO	639_M08	Information and communication	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Information and communication	RADIO Sound 20	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Information and communication	COMAND or AUDIO	●	●	○	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Information and communication	NAVI-Navigation system (COMAND, SOUND 50)	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Information and communication	AVN-Headlamp range adjustment	●	●	○	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Information and communication	CDW-CD changer	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Information and communication	TEL-Telephone control unit	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Seats and doors	DCM-FL-Door control module front left	●	●	○	●	●	●	●	F12C
From 2004 to 2007	VANEO	639_M08	Seats and doors	DCM-FR-Door control module front right	●	●	○	●	●	●	●	F12D
From 2004 to 2007	VANEO	639_M08	Seats and doors	STE-R-ESD [STE] Right electric sliding door	●	●	○	●	●	●	●	F12E F12F F130
From 2004 to 2007	VANEO	639_M08	Seats and doors	STE-L-ESD [STE] Left electric sliding door	●	●	○	●	●	●	●	F12E F12F F130
From 2004 to 2007	VANEO	639_M08	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	●	●	○	●	●	○	●	F131 F132 F133 F134 F135
From 2004 to 2007	VANEO	639_M08	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	●	●	○	●	●	○	●	F131 F132 F133 F134 F135
From 2004 to 2007	VANEO	639_M08	Air conditioning	REAR AC-Rear air conditioning	●	●	●	●	●	●	●	F136
From 2004 to 2007	VANEO	639_M08	Air conditioning	AAC-Automatic air conditioning	●	●	○	●	●	●	●	F137



Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2004 to 2007	VANEO	639_M08	Air conditioning	STH-Stationary heater	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Air conditioning	PTC-Heater booster	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Air conditioning	PTC-Heater booster	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Drive	CDID2-Common Rail Diesel Injection	●	●	●	●	●	●	●	F01B F004 F002 F00E F00F F008 F007 F01C F01D F01E F01F F020 F021 F022 F023 F024 F025 F026 F027 F028 F029 F02A F02B F02C F02D F014 F02E F02F F030 F031 F009 F032 F033 F034 F015 F035 F036 F01A
From 2004 to 2007	VANEO	639_M08	Drive	CDI4-Common Rail Diesel Injection	●	●	●	●	●	●	●	F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010 F011 F012 F013 F014 F015 F016 F017 F018 F004 F019
From 2004 to 2007	VANEO	639_M08	Drive	CDI6-Common Rail Diesel Injection	●	●	●	●	●	●	●	F01B F004 F009 F002 F00E F00F F008 F007 F037 F038 F039 F020 F03A F03B F03C F03D F03E F03F F040 F041 F042 F02E F014 F043 F015 F006 F030 F044 F045 F046 F02F F047 F048 F049 F04A F01A F02B F04B
From 2004 to 2007	VANEO	639_M08	Drive	CDI-Common Rail Diesel Injection	●	●	●	●	●	●	●	F005 F007 F008 F001 F138 F00C F139 F13A F13B F13C F13D F13E F0F1 F0EC
From 2004 to 2007	VANEO	639_M08	Drive	EGS Electronic transmission control	○	○	○	○	○	●	○	
From 2004 to 2007	VANEO	639_M08	Drive	EGS electronic transmission control	○	○	○	○	○	●	○	
From 2004 to 2007	VANEO	639_M08	Drive	ESM-Electronic selector module	●	●	○	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Drive	FSCU-Fuel pump	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Chassis	ESP-Electronic stability program	●	●	●	●	●	●	●	F0FC F0FD F06E F0FE F0FF F100 F101 F102 F103 F073
From 2004 to 2007	VANEO	639_M08	Chassis	TPC-Tire pressure monitor	●	●	●	●	●	●	●	F104 F07C F07D F016 F105
From 2004 to 2007	VANEO	639_M08	Chassis	ENR-Electronic rear axle level control	●	●	○	●	○	●	●	F106 F07F
From 2004 to 2007	VANEO	639_M08	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F10E F082 F083 F108
From 2004 to 2007	VANEO	639_M08	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F10E F082 F083 F108
From 2004 to 2007	VANEO	639_M08	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F114 F115 F08C F08D F08E F08F F14E
From 2004 to 2007	VANEO	639_M08	Body	SAM-Signal acquisition and actuation module	●	●	○	●	●	●	○	





Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2004 to 2007	VANEO	639_M08	Air conditioning	PTC-Heater booster	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Air conditioning	PTC-Heater booster	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
From 2003 to 2014	Sprinter	909	Drive	CDI4-Common Rail Diesel Injection	●	●	●	●	●	●	●	F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010 F011 F012 F013 F014 F015 F016 F017 F018 F004 F019
From 2003 to 2014	Sprinter	909	Chassis	ESP-Electronic stability program	●	●	●	●	●	●	●	F14F F150
From 2003 to 2014	Sprinter	909	Body	SRS-supplemental restraint system	●	●	●	●	●	●	●	F082
From 2003 to 2014	Sprinter	909	Body	HZR-Heating control	●	●	○	●	●	●	●	
From 2003 to 2014	Sprinter	909	Body	WSP immobilizer	●	●	○	●	●	●	○	F151 F152
From 2003 to 2014	Sprinter	909	Body	ZV-Central locking system	●	●	○	●	●	●	●	
From 2003 to 2014	Sprinter	909	Information and communication	KI-Instrument cluster	●	●	○	●	●	●	●	F153 F122
From 1995 to 2006	SprinterI	90x/6	Drive	SSG-Sprintshift transmission	●	●	○	●	●	●	●	F154 F155 F156 F157 F158 F0FB
From 1995 to 2006	SprinterI	90x/6	Drive	EGS electronic transmission control	○	○	○	○	○	●	○	
From 1995 to 2006	SprinterI	90x/6	Chassis	ESP-Electronic stability program	●	●	○	●	●	●	●	F0F6 F0F7 F0F8 F0F9 F0FA F0FB F01A
From 1995 to 2006	SprinterI	90x/6	Body	CR-Common rail	●	●	○	●	●	●	●	F016 F082 F159
From 1995 to 2006	SprinterI	90x/6	Body	ABS-Anti lock braking system	●	●	○	●	●	※	●	F15A
From 1995 to 2006	SprinterI	90x/6	Body	ABW-Airbag with window airbag	○	○	○	○	○	※	○	
From 1995 to 2006	SprinterI	90x/6	Body	KI-Instrument cluster	●	●	●	●	●	※	●	F15B F11E F153 F122 F15B F124 F15C F0DB F15D F082
From 1995 to 2006	SprinterI	90x/6	Body	ARS-All-wheel system	●	●	○	●	●	※	●	
From 1995 to 2006	SprinterI	90x/6	Body	WSP immobilizer	●	●	○	●	●	※	○	F15E F15F F160
From 1995 to 2006	SprinterI	90x/6	Body	APS-Auto pilot system	●	●	○	●	●	※	○	
From 1995 to 2006	SprinterI	90x/6	Body	EDW2-Anti-theft alarm	●	●	○	●	●	※	●	F161

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 1995 to 2006	SprinterI	90x/6	Body	EWM-Electronic selector lever module	●	●	●	●	●	※	●	
From 1995 to 2006	SprinterI	90x/6	Body	HZR-Heating control	●	●	○	●	●	●	●	
From 1995 to 2006	SprinterI	90x/6	Body	RFH backup assist	●	●	○	●	●	●	●	FOFA
From 1995 to 2006	SprinterI	90x/6	Body	ZV-Central locking system	●	●	○	●	●	●	●	
From 1995 to 2006	SprinterI	90x/6	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 1995 to 2006	SprinterI	90x/6	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 1995 to 2006	SprinterI	90x/6	Air conditioning	ZHE-L-Auxiliary heater warm air	●	●	●	●	●	○	●	
From 1995 to 2006	SprinterI	90x/6	Air conditioning	ZUH-Heater booster	●	●	○	●	●	○	●	
From 1995 to 2006	SprinterI	90x/6	Air conditioning	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 1995 to 2006	SprinterI	90x/6		AB-Airbag	●	●	○	●	○	※	○	
From 2006 to 2009	SprinterI	90x/6	Drive	EGS electronic transmission control	○	○	○	○	○	●	○	
From 2006 to 2009	SprinterI	90x/6	Drive	SSG-Sprintshift transmission	●	●	○	●	●	●	●	F154 F155 F156 F157 F158 F0FB
From 2006 to 2009	SprinterI	90x/6	Chassis	ESP-Electronic stability program	●	●	○	●	●	●	●	F0F6 F0F7 F0F8 F0F9 F0FA F0FB F01A
From 2006 to 2009	SprinterI	90x/6	Body	ME-Motor electronics	●	●	○	●	●	※	●	F082 F016 F0FB F162
From 2006 to 2009	SprinterI	90x/6	Body	CR-Common rail	●	●	○	●	●	●	●	F016 F082 F159
From 2006 to 2009	SprinterI	90x/6	Body	CR-Common rail	●	●	○	●	●	●	●	F163 F164 F165
From 2006 to 2009	SprinterI	90x/6	Body	LPG Liquefied Petroleum Gas	●	●	○	●	●	●	○	F0FB
From 2006 to 2009	SprinterI	90x/6	Body	ABS-Anti lock braking system	●	●	○	●	●	※	●	F15A
From 2006 to 2009	SprinterI	90x/6	Body	ABW-Airbag with window airbag	○	○	○	○	○	※	○	
From 2006 to 2009	SprinterI	90x/6	Body	KI-Instrument cluster	●	●	●	●	●	※	●	F15B F11E F153 F122 F15B F124 F15C F0DB F15D F082

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2006 to 2009	SprinterI I	90x/6	Body	WSP immobilizer	●	●	○	●	●	※	○	F15E F15F F160
From 2006 to 2009	SprinterI I	90x/6	Body	APS-Auto pilot system	●	●	○	●	●	※	○	
From 2006 to 2009	SprinterI I	90x/6	Body	ARS-All-wheel system	●	●	○	●	●	※	●	
From 2006 to 2009	SprinterI I	90x/6	Body	EDW2-Anti-theft alarm	●	●	○	●	●	※	●	F161
From 2006 to 2009	SprinterI I	90x/6	Body	EWM-Electronic selector lever module	●	●	●	●	●	※	●	
From 2006 to 2009	SprinterI I	90x/6	Body	HZR-Heating control	●	●	○	●	●	●	●	
From 2006 to 2009	SprinterI I	90x/6	Body	RFH backup assist	●	●	○	●	●	●	●	FOFA
From 2006 to 2009	SprinterI I	90x/6	Body	ZV-Central locking system	●	●	○	●	●	●	●	
From 2006 to 2009	SprinterI I	90x/6	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2006 to 2009	SprinterI I	90x/6	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2006 to 2009	SprinterI I	90x/6	Air conditioning	ZHE-L-Auxiliary heater warm air	●	●	●	●	●	○	●	
From 2006 to 2009	SprinterI I	90x/6	Air conditioning	ZUH-Heater booster	●	●	○	●	●	○	●	
From 2006 to 2009	SprinterI I	90x/6	Air conditioning	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2006 to 2009	SprinterI I	90x/6		AB-Airbag	●	●	○	●	○	※	○	

## Specil\_Function

Index	Specil Function Name	Index	Specil Function Name
F001	Drive authorization	F002	Write VIN.
F003	Tire size	F004	Maximum vehicle speed limit
F005	Initialization of system 'Diesel particulate filter'	F006	Teach in used diesel particulate filter.
F007	Regeneration of diesel particulate filter	F008	Regeneration of diesel particulate filter when driving
F009	Adjustment of injector injection quantities	F00A	Initialization of system 'Air filter'
F00B	Initialization of system 'Throttle valve positioner'	F00C	Initialization of system 'Air intake, turbocharging'
F00D	Initialization of system 'Common Rail'	F00E	Teach-in process after replacement of component Diesel particulate filter
F00F	Teaching in the diesel particulate filter after replacing the engine control unit	F010	Limit values Working speed control
F011	Initialize component Hot film mass air flow sensor.	F012	Teach in component Throttle valve.
F013	Initialize system 'Rail pressure regulation'.	F014	Teach in new diesel particulate filter.
F015	Reset fill factor of air filter.	F016	Variant coding
F017	Working speed control	F018	Vehicle speed limit less than 60 km/h
F019	Circumference of tires	F01A	Coding according to plant data
F01B	Activate drive authorization system.	F01C	B2/12 (Hot film mass air flow sensor)
F01D	B4/16 (Rail pressure sensor)	F01E	B28/18 (Diesel particulate filter differential pressure sensor)
F01F	B85/2 (Oxygen sensor)	F020	M3/5 (Fuel pump with fuel level sensor)
F021	M16/45 (Throttle valve actuator)	F022	M72/1 (Intake port shutoff actuator)
F023	R9 (Glow plugs)	F024	Y74/5 (Pressure regulator valve)
F025	Y94/3 (Quantity control valve)	F026	Turbocharger
F027	Diesel particulate filter	F028	Air filter
F029	Leak in system Charge air	F02A	Leak in system Exhaust
F02B	Type approval number	F02C	Quick teach-in of the zero quantity calibration values at idle
F02D	Quick teach-in of the zero quantity calibration values while driving	F02E	Resetting the lambda values
F02F	Activate fuel pump.	F030	Learning of the throttle valve stop
F031	Teach-in of intake port shutoff	F032	Teach in component 48584.
F033	Teach in component Charge pressure positioner.	F034	Teach in component Quantity control valve.
F035	Teach in component Glow output stage.	F036	Deletion of values
F037	B4/17 (Rail pressure sensor)	F038	B16/12 (Temperature sensor upstream of SCR catalytic converter)
F039	B28/20 (Diesel particulate filter differential pressure sensor)	F03A	M16/48 (Throttle valve actuator)

Index	Specil Function Name	Index	Specil Function Name
F03B	Y74/6 (Pressure regulator valve)	F03C	Y76 (Injectors)
F03D	Y130 (AdBlue?injection valve)	F03E	SCR catalytic converter
F03F	Teach in component NOx sensor upstream of SCR catalytic converter.	F040	Teach in component Status of NOx sensor downstream of SCR catalytic converter.
F041	Reset quantity mean value adaptation data.	F042	Reset values for HFM drift compensation.
F043	Teach in component Diesel oxidation catalytic converter.	F044	Teach in component Differential pressure sensor.
F045	Exhaust gas recirculation valve teach-in	F046	Teach in component Pressure control valve.
F047	Teach in component Y130 (AdBlue?injection valve).	F048	Initialize system 'SCR'.
F049	Teach in component SCR catalytic converter.	F04A	Teach in component B16/12 (Temperature sensor upstream of SCR catalytic converter).
F04B	SCN/CVN Control unit CDI	F04C	Initialization after component replacement
F04D	Coding display	F04E	SCN/CVN NOx sensor upstream of SCR catalytic converter
F04F	SCN/CVN NOx sensor downstream of SCR catalytic converter	F050	Drive authorization system
F051	Initial startup	F052	Reset adaptation values.
F053	Fuel quantity	F054	Engine state
F055	Engine parameter	F056	Fuel system
F057	Peripheral parameters	F058	Exhaust
F059	Advanced options	F05A	Vehicle speeds
F05B	Chassis	F05C	Complete vehicle
F05D	Other functions	F05E	All coding settings
F05F	Ignition	F060	Learning of the recirculated air flap stop
F061	Teach in of drive authorization system	F062	CNG compressed natural gas Mode
F063	Resetting of sensor adaptation	F064	Activate or deactivate component Y107/9 (Low pressure shutoff valve).
F065	Calibration of component B24/15 (Yaw rate, lateral and longitudinal acceleration sensor)	F066	Component Sensor 'Yaw rate, lateral and longitudinal acceleration': Perform calibration.
F067	Trailer stabilization	F068	Hill descent
F069	Stop lamp	F06A	Brake temperature
F06B	Alternator management	F06C	Transmission neutral switch
F06D	HBC	F06E	Start-off assist
F06F	Hybrid drive	F070	Body version
F071	Loser Untergrund Logik	F072	Installation position
F073	Engine start/stop device	F074	Rain/light sensor
F075	Retarder	F076	Road Rail Status
F077	ABS, ASR, MSR, ESP	F078	Cruise control
F079	Brake	F07A	Vacuum sensor
F07B	BS_VAR	F07C	Initial startup with automatic takeover of settings of previous control unit
F07D	Initial startup with manual settings input for new control unit, For example: The previous control unit can no longer be read.	F07E	Write wheel electronics identification number.
F07F	Level calibration	F080	A9/1m1 (Air compressor motor)



Index	Specil Function Name	Index	Specil Function Name
F081	Y36 (Level control valve unit)	F082	Interlock control module.
F083	Read coding.	F084	Activation(ELVElectric steering lock)
F085	Central locking(Customer-specific settings)	F086	EZS:Detach transport protection.
F087	ELV:Detach transport protection.	F088	EZS:Personalizing
F089	ELV:Personalizing	F08A	Activate control module EZS.
F08B	Activate control module ELV.	F08C	Disable key or key track.
F08D	Once again authorize key or key track.	F08E	Teach in additional key.
F08F	Program replacement keys.	F090	Configuration Electric steering lock
F091	Configuration Central locking	F092	Vehicle data
F093	Body	F094	Doors
F095	Window(s)	F096	Engine Transmission
F097	Chassis	F098	Lighting
F099	Climate control	F09A	Anti-theft alarm system Central locking
F09B	Body manufacturer	F09C	Other functions
F09D	Specified configuration of the interior CAN bus	F09E	Other Coding
F09F	Step 1 Determine random number for teach-in of transponder key.	F0A0	Step 2 Enter the encrypted random number generated by FDOK.
F0A1	Calibrate control unit LWR.	F0A2	Perform normalizing of component Sliding/tilting roof.
F0A3	Perform denormalization of component Sliding/tilting roof.	F0A4	Delete denormalization causes.
F0A5	Inversion of rotation direction	F0A6	Reset alarm sources.
F0A7	Teach in component Battery-operated horn.	F0A8	Teach in component Rain/light sensor.
F0A9	Function 'Silent alarm'	F0AA	Reset of maintenance interval display
F0AB	Key track All	F0AC	Key track 1
F0AD	Key track 2	F0AE	Key track 3-8
F0AF	Menu settings(Basic settings)	F0B0	Trip computer1
F0B1	Trip computer2	F0B2	Parameterization of the current oil data record
F0B3	Parameter Instrument cluster	F0B4	ASSYST Active Service System
F0B5	Vehicle equipment	F0B6	Configuration Indicators
F0B7	Vehicle speed display	F0B8	Configuration of menu items in multifunction display
F0B9	Parameter TCO Tachograph	F0BA	Parameter ESP Electronic Stability Program
F0BB	Parameter Seat belt reminder warning	F0BC	Tank parameters
F0BD	Fuel tank characteristic curve	F0BE	Extended tank algorithm
F0BF	Fuel tank sensor tight installation recognition	F0C0	Customer-specific settings 1
F0C1	Customer-specific settings 2	F0C2	Customer-specific settings 3
F0C3	Teach in actuator motors.	F0C4	Default initialization
F0C5	Correction programming	F0C6	Road test
F0C7	Reading out the VIN	F0C8	Writing of the VIN
F0C9	Remote control key 1	F0CA	Transponder key 1
F0CB	Remote control key 2	F0CC	Transponder key 2
F0CD	Remote control key 3	F0CE	Transponder key 3
F0CF	Remote control key 4	F0D0	Transponder key 4
F0D1	Remote control key 5	F0D2	Transponder key 5
F0D3	Remote control key 6	F0D4	Transponder key 6

Index	Specil Function Name	Index	Specil Function Name
FOD5	Remote control key 7	FOD6	Transponder key 7
FOD7	Remote control key 8	FOD8	Transponder key 8
FOD9	ASSYST settings	FODA	Time
FODB	Setting main odometer forward	FODC	Resetting of main odometer, Version: USA The main odometer cannot be set back in the USA., Version: Canada The kilometer reading can only be changed during the first 10 kilometers., Version: Rest of world The kilometer reading can only be changed during the first 250 kilometers.
FODD	Oil change	FODE	Read coding and transfer to the new control unit.
FODF	Special equipment	FOE0	Codings specific for instrument cluster
FOE1	Reset overload protection counter.	FOE2	Bleeding
FOE3	AKS setting	FOE4	Engagement point determination
FOE5	Reset teach-in byte for the air conditioning or automatic heater.	FOE6	Definition
FOE7	Display adaption data.	FOE8	Resetting of adaptation data
FOE9	Performing adaptation if transmission replaced or transmission repaired	FOEA	Noise reduction
FOEB	Force-free in position D	FOEC	Control unit replacement
FOED	Control module data	FOEE	Settings
FOEF	Performing adaptation	FOF0	Drive authorization:Learning process (identification)
FOF1	Read coding and change if necessary.	FOF2	Tester identification
FOF3	Check sensor adaptation.	FOF4	Check mixture adaptation.
FOF5	Resetting of mixture adaptation	FOF6	Component B24/8 (Steering angle sensor): Perform calibration.
FOF7	Calibration of steering angle sensor	FOF8	Coding:Vehicle length
FOF9	Parameterization of Hydraulic brake assist (Read only - cannot be changed)	FOFA	Parameterization
FOFB	Automatic control module replacement	FOFC	Component : B24/8 (Steering angle sensor):Perform calibration.
FOFD	Component : B24/15 (Yaw rate, lateral and longitudinal acceleration sensor):Perform calibration.	FOFE	Trailer Stability Assist (TSA)
FOFF	Vehicle weight	F100	TSTH Stop lamp
F101	System parameter block 1	F102	System parameter block 2
F103	Parameterization mode	F104	Writing of specified pressure values.
F105	Tire pressure set values	F106	Replace control module. (Only the calibration data are transferred.)
F107	Vehicle ident no.	F108	Special settings
F109	Parameter	F10A	Equipment
F10B	Child seat	F10C	Igniter allocation table
F10D	Function allocation table	F10E	Transmit key ID to control unit N2/11 (Supplemental restraint system (SRS)).

Index	Specil Function Name	Index	Specil Function Name
F10F	Disable key or key track with the workshop key.	F110	Detach transport protection. N73 (Electronic ignition switch (EIS [EZS]))
F111	Detach transport protection. N26/5 (Electric steering lock)	F112	Personalizing N73 (Electronic ignition switch (EIS [EZS]))
F113	Personalizing N26/5 (Electric steering lock)	F114	Drive authorization system( EZS ESL CDI)- Detach transport protection. Personalizing. Activating
F115	Drive authorization system( EZS ESL ME-SFI)- Detach transport protection. Personalizing. Activating	F116	Changeover (ESP 5.7 - ESP 8.1)
F117	Normalizing routine/Learning process	F118	Adapt obstruction protection.
F119	Coding of sliding/tilting roof function of 'automatic operation'	F11A	Learning to the drive authorization system
F11B	Setting main odometer forward and back	F11C	Indicator lamp test
F11D	CAN bus control units	F11E	General parameter set
F11F	Instrument cluster settings	F120	Audio system
F121	Writing of maintenance interval display parameters	F122	Set tire size.
F123	Vehicle speed signal	F124	Vehicle speed warning
F125	Trip computer settings	F126	General
F127	Wheels	F128	Service interval processor
F129	Personalizing	F12A	Resetting menu settings to manufacturer default settings
F12B	Set date and time.	F12C	Parameterization of N69/1 (Left front door control unit (DCM-LF [TSG-VL])) Power window
F12D	Parameterization of N69/2 (Right front door control unit (DCM-RF [TSG-VR])) Power window	F12E	Normalizing
F12F	Detection of sliding movement	F130	Denormalization
F131	Normalizing of forward/back adjustment	F132	Normalizing of height adjustment at front
F133	Normalizing of height adjustment at rear	F134	Normalizing of head restraint adjustment
F135	Normalizing of backrest adjustment	F136	Perform normalizing of component A32/2m3 (Rear blending air flap actuator motor).
F137	Normalizing of positioning motors	F138	Adjustment of injector injection quantities/Injector shutoff
F139	Initialization of system 'Catalytic converter'	F13A	Tire circumference parameter
F13B	Idle speed adjustment( 840 1/min )	F13C	Idle speed adjustment( 800 1/min )
F13D	Extension of run-on time	F13E	Adjustment value of start quantity
F13F	Important information on adaptation limit values	F140	Important information on the combination possibilities for adapation end stop values
F141	Adaptation values of shift 1-2:	F142	Adaptation values of shift 2-3:
F143	Adaptation values of shift 3-4:	F144	Adaptation values of shift 4-5:
F145	Adaptation values of shift 5-4:	F146	Adaptation values of shift 4-3:
F147	Adaptation values of shift 3-2:	F148	Adaptation values of shift 2-1:
F149	Display all adaptation data.	F14A	Resetting of adaptation data
F14B	Transmission control	F14C	Torque converter lockup clutch
F14D	Perform coding manually.	F14E	Options central locking

Index	Specil Function Name	Index	Specil Function Name
F14F	Calibration of component Sensor 'Yaw rate, lateral and longitudinal acceleration'	F150	Calibration of component B143 (Steering angle sensor)
F151	Learn additional transponder key. (X1)	F152	Erase all the transponder keys and relearn the current one. (X2)
F153	Set time.	F154	Learn gears.
F155	Information regarding learning processes	F156	Learning process for clutch closing point
F157	Learning process for clutch grip point	F158	Learning process for clutch transmission index
F159	Injector classification	F15A	Control unit adaptations
F15B	Setting the main odometer back	F15C	Current main odometer reading
F15D	Entry of K-factors	F15E	TEMIC transponder
F15F	Learn additional transponder key.	F160	Erase all the transponder keys and relearn the current one.
F161	Alarm sources	F162	Maximum vehicle speed limit(HGB)
F163	Change to injector classification	F164	Initialization of injector classification
F165	Activate control module CDI.		