

MaxiSysPro_MINI_V10.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

| Model Series | Part | Systems | Ecu Info. | Read DTC | Freeze Frame | Erase DTC | Live Data | Component activation | Physical HW |
|--------------|---------|--|-----------|----------|--------------|-----------|-----------|----------------------|-------------|
| R50/R52/R53 | Body | MRS/AB Airbag/ACSM | ● | ● | ○ | ● | ● | ○ | ● |
| R50/R52/R53 | Body | AIC Automatic Interval control | ● | ● | ○ | ● | ● | ○ | ○ |
| R50/R52/R53 | Body | BM On-board monitor | ● | ● | ○ | ● | ● | ● | ○ |
| R50/R52/R53 | Body | CDC CD Changer | ● | ● | ○ | ● | ○ | ● | ● |
| R50/R52/R53 | Body | CVM/CVM2 Convertible top module | ● | ● | ○ | ● | ● | ● | ● |
| R50/R52/R53 | Body | DSP Digital Sound Processor | ● | ● | ○ | ● | ● | ○ | ○ |
| R50/R52/R53 | Body | IHKA Heater/automatic A/C control | ● | ● | ○ | ● | ● | ● | ● |
| R50/R52/R53 | Body | KOM Instrument cluster | ● | ● | ○ | ● | ● | ● | ○ |
| R50/R52/R53 | Body | LRA Automatic headlight vertical aim control | ● | ● | ○ | ● | ● | ● | ○ |
| R50/R52/R53 | Body | MFL Multifunction steering wheel I | ● | ● | ○ | ● | ○ | ○ | ○ |
| R50/R52/R53 | Body | MFL Multifunction steering wheel II | ● | ● | ○ | ● | ○ | ○ | ○ |
| R50/R52/R53 | Body | NAJ Navigation computer, Japan | ● | ● | ○ | ● | ● | ● | ○ |
| R50/R52/R53 | Body | NAV Navigation computer, Europe | ● | ● | ○ | ● | ● | ○ | ○ |
| R50/R52/R53 | Body | PDC Park distance control | ● | ● | ○ | ● | ● | ● | ● |
| R50/R52/R53 | Body | RAD Radio | ● | ● | ○ | ● | ● | ● | ● |
| R50/R52/R53 | Body | RLS Rain/Light Sensor | ● | ● | ○ | ● | ● | ○ | ● |
| R50/R52/R53 | Body | SBBF Seat occupancy, passenger | ● | ● | ○ | ● | | ○ | ○ |
| R50/R52/R53 | Body | SHD Sliding/tilting sunroof | ● | ● | ○ | ● | ● | ● | ● |
| R50/R52/R53 | Body | ULF Universal charging and hands-free facility | ● | ● | ○ | ● | ● | ● | ● |
| R50/R52/R53 | Body | VID Video module | ● | ● | ○ | ● | ○ | ○ | ○ |
| R50/R52/R53 | Body | ZKE Central body electronics BC1 | ● | ● | ○ | ● | ● | ● | ○ |
| R50/R52/R53 | Body | ZKE Central body electronics BC1 (Redesign) | ● | ● | ○ | ● | ● | ● | ○ |
| R50/R52/R53 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ○ | ● | ● | ● | ● |
| R50/R52/R53 | Chassis | EHPS Electro-hydraulic steering assistance | ● | ● | ○ | ● | ● | ● | ○ |
| R50/R52/R53 | Chassis | LEW Steering-angle sensor | ● | ● | ○ | ● | ● | ○ | ○ |
| R50/R52/R53 | Chassis | RDC Tyre pressure control | ● | ● | ○ | ● | ● | ● | ● |

| Model Series | Part | Systems | Ecu Info. | Read DTC | Freeze Frame | Erase DTC | Live Data | Component activation | Physical HW |
|--------------|---------|--|-----------|----------|--------------|-----------|-----------|----------------------|-------------|
| R50/R52/R53 | Chassis | RPW tyre-blowout warning system | ● | ● | ○ | ● | ● | ○ | ○ |
| R50/R52/R53 | Drive | DME/DDE (Engine Electronics) | ● | ● | ○ | ● | ● | ● | ● |
| R50/R52/R53 | Drive | EGS/AGS (Transmission Control) | ● | ● | ○ | ● | ● | ● | ● |
| R50/R52/R53 | Drive | EWS Vehicle immobilizer | ● | ● | ○ | ● | ● | ● | ○ |
| R55/R56/R57 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ● | ○ | ● |
| R55/R56/R57 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | AMPH Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | CA Comfort access system | ● | ● | ● | ● | ● | ○ | ● |
| R55/R56/R57 | Body | CAN communication analysis | ● | ● | ● | ○ | ○ | ○ | ○ |
| R55/R56/R57 | Body | CCC-A Applications | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | CCC-ANT Aerial tuner | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | CCC-ASK Audio system controller | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | CCC-BO User interface | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | CCC-GW Gateway | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | CDC CD Changer | ● | ● | ● | ● | ○ | ● | ● |
| R55/R56/R57 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | CVM/CVM2 Convertible top module | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | DAB Digital tuner | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | FRM footwell module | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | IBOC Digital tuner US | ● | ● | ● | ● | ● | ○ | ● |
| R55/R56/R57 | Body | IHKA Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | IHKS Integrated heating/air-conditioning control | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | IHS Integrated heating control | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | JBE Junction-box electronics | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | JNAV Navigation system, Japan | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | MJOY MINI joystick | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | MOST system analysis | ● | ● | ● | ● | ○ | ○ | ○ |
| R55/R56/R57 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | RAD2-BO User interface | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | RAD2-GW Gateway | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | SDARS Satellite tuner | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | SHD Sliding/tilting sunroof | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | SZL Switch centre, steering column | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | ● |

| Model Series | Part | Systems | Ecu Info. | Read DTC | Freeze Frame | Erase DTC | Live Data | Component activation | Physical HW |
|--------------|---------|---------------------------------------|-----------|----------|--------------|-----------|-----------|----------------------|-------------|
| R55/R56/R57 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Body | VM Video Module | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Chassis | EPS Electronic Power Steering | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | ● |
| R55/R56/R57 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ● | ○ | ● |
| R58/R59 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | AMPH Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | CA Comfort access system | ● | ● | ● | ● | ● | ○ | ● |
| R58/R59 | Body | CBX-ECALL Combox emergency call | ● | ● | ● | ● | ● | ● | ○ |
| R58/R59 | Body | CHAMP-BO User interface | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | CHAMP-GW Gateway | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | FRM footwell module | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | IBOC Digital tuner US | ● | ● | ● | ● | ● | ○ | ● |
| R58/R59 | Body | IHKA Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | JBE Junction-box electronics | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | MJOY MINI joystick | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | SHD Sliding/tilting sunroof | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | SZL Steering column switch centre 2 | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Chassis | EDC Damper Control | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Chassis | EPS Electronic Power Steering | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | ● |
| R58/R59 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ● | ○ | ● |
| R60 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | AMPH Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | ● |

| Model Series | Part | Systems | Ecu Info. | Read DTC | Freeze Frame | Erase DTC | Live Data | Component activation | Physical HW |
|--------------|---------|--|-----------|----------|--------------|-----------|-----------|----------------------|-------------|
| R60 | Body | CA Comfort access system | ● | ● | ● | ● | ● | ○ | ● |
| R60 | Body | CBX-ECALL Combox emergency call | ● | ● | ● | ● | ● | ● | ○ |
| R60 | Body | CHAMP-BO User interface | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | CHAMP-GW Gateway | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | FRM footwell module | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | IBOC Digital tuner US | ● | ● | ● | ● | ● | ○ | ● |
| R60 | Body | IHKA Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | JBE Junction-box electronics | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | MJOY MINI joystick | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | SHD Sliding/tilting sunroof | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | SZL Steering column switch centre 2 | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | ● |
| R60 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | ● |
| R60 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | ● |
| R60 | Chassis | EDC Damper Control | ● | ● | ● | ● | ● | ● | ● |
| R60 | Chassis | EPS Electronic Power Steering | ● | ● | ● | ● | ● | ● | ● |
| R60 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | ● |
| R60 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | ● |
| R60 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ● | ○ | ● |
| F56 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | AMPH Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | AMPT Top Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | ASD Active Sound Design | ● | ● | ● | ● | ● | ● | ○ |
| F56 | Body | CBX-ECALL Combox emergency call | ● | ● | ● | ● | ● | ● | ○ |
| F56 | Body | CIC Car Information Computer | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | CON Controller | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | DVDC DVD Changer | ● | ● | ● | ● | ○ | ● | ● |
| F56 | Body | FZD Function centre, roof | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | HKL Rear-lid lift | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | IHKA Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | KAFAS Camera-based driver-assistance systems | ● | ● | ● | ● | ● | ● | ○ |

| Model Series | Part | Systems | Ecu Info. | Read DTC | Freeze Frame | Erase DTC | Live Data | Component activation | Physical HW |
|--------------|---------|--|-----------|----------|--------------|-----------|-----------|----------------------|-------------|
| F56 | Body | PMA Parking assistant | ● | ● | ● | ● | ● | ● | ○ |
| F56 | Body | SMFA Seat module, driver | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | SZL Switch centre, steering column | ● | ● | ● | ● | ● | ● | ● |
| F56 | Body | ZGM Central Gateway Module | ● | ● | ● | ● | ○ | ○ | ● |
| F56 | Body | TR SVC_allround-view camera | ● | ● | ● | ● | ● | ● | ○ |
| F56 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | ● |
| F56 | Chassis | AL active steering | ● | ● | ● | ● | ● | ○ | ● |
| F56 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | ● |
| F56 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | ● |
| F56 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ● | ○ | ● |
| F55 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | AMPH Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | AMPT Top Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | ASD Active Sound Design | ● | ● | ● | ● | ● | ● | ○ |
| F55 | Body | CBX-ECALL Combox emergency call | ● | ● | ● | ● | ● | ● | ○ |
| F55 | Body | CIC Car Information Computer | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | CON Controller | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | DVDC DVD Changer | ● | ● | ● | ● | ○ | ● | ● |
| F55 | Body | FZD Function centre, roof | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | HKL Rear-lid lift | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | IHKA Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | KAFAS Camera-based driver-assistance systems | ● | ● | ● | ● | ● | ● | ○ |
| F55 | Body | PMA Parking assistant | ● | ● | ● | ● | ● | ● | ○ |
| F55 | Body | SMFA Seat module, driver | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | SZL Switch centre, steering column | ● | ● | ● | ● | ● | ● | ● |
| F55 | Body | ZGM Central Gateway Module | ● | ● | ● | ● | ○ | ○ | ● |
| F55 | Body | TR SVC_allround-view camera | ● | ● | ● | ● | ● | ● | ○ |
| F55 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | ● |
| F55 | Chassis | AL active steering | ● | ● | ● | ● | ● | ○ | ● |
| F55 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | ● |
| F55 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | ● |
| F55 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ● | ○ | ● |

| Model Series | Part | Systems | Ecu Info. | Read DTC | Freeze Frame | Erase DTC | Live Data | Component activation | Physical HW |
|--------------|---------|---------------------------------------|-----------|----------|--------------|-----------|-----------|----------------------|-------------|
| R61 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | AMPH Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | CA Comfort access system | ● | ● | ● | ● | ● | ○ | ● |
| R61 | Body | CBX-ECALL Combox emergency call | ● | ● | ● | ● | ● | ● | ○ |
| R61 | Body | CHAMP-BO User interface | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | CHAMP-GW Gateway | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | FRM footwell module | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | IBOC Digital tuner US | ● | ● | ● | ● | ● | ○ | ● |
| R61 | Body | IHKA Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | JBE Junction-box electronics | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | MJOY MINI joystick | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | SHD Sliding/tilting sunroof | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | SZL Steering column switch centre 2 | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | ● |
| R61 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | ● |
| R61 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | ● |
| R61 | Chassis | EDC Damper Control | ● | ● | ● | ● | ● | ● | ● |
| R61 | Chassis | EPS Electronic Power Steering | ● | ● | ● | ● | ● | ● | ● |
| R61 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | ● |
| R61 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | ● |
| R61 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | ● |
| F57 | Drive | CAS Car access system | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Drive | Engine-DME Digital Motor Electronics | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Drive | EGS transmission management | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Chassis | AL active steering | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Chassis | ABS-DSC Dynamic Stability Control | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | Airbag-ACSM Crash Safety Module | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | AHM trailer module | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | AMPH Hi-Fi amplifier | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | AMPT Top Hi-Fi amplifier | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | ASD Active Sound Design | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | CBX-ECALL ComBox emergency call | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | CIC Car Information Computer | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |

| Model Series | Part | Systems | Ecu Info. | Read DTC | Freeze Frame | Erase DTC | Live Data | Component activation | Physical HW |
|--------------|------|--|-----------|----------|--------------|-----------|-----------|----------------------|-------------|
| F57 | Body | CON Controller | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | DSP Digital Sound Processor | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | DVDC DVD changer | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | FZD Function centre, roof | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | HKL Automatic luggage compartment lid actuation | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | IHKA Integrated automatic heating/air conditioning | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | INSTR Instrument cluster | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | KAFAS Camera-based driver-assistance systems | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | PMA Parking assistant | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | SMFA Seat module, driver | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | Airbag-SZL Switch centre, steering column | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | TRSVC allround-view camera | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | TBX Touchbox | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |
| F57 | Body | ZGM Central Gateway Control Module | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ○ |

Service Function List

| Part | Components | Status |
|------------------------|---|--------|
| Maintenance | CBS reset Key Word Protocol | ● |
| Maintenance | CBS Reset UDS | ● |
| Maintenance | CBS reset, engine oil | ● |
| Maintenance | CBS vehicle data correction | ● |
| Maintenance | Charging the battery via diagnostic socket | ● |
| Maintenance | Delete transport mode | ● |
| Maintenance | Reset pre-delivery check | ● |
| Maintenance | Setting the transport mode | ● |
| Maintenance | Write service history | ● |
| Vehicle information | Check Control messages | ● |
| Vehicle information | Integration level | ● |
| Vehicle information | KOMBI: Convertible top opening time display | ● |
| Vehicle information | Read Check Control history memory | ● |
| Vehicle information | Total counter, convertible top opening time | ● |
| Body | A/C compressor running-in protection | ● |
| Body | Activate deactivate test card | ● |
| Body | Activate SDARS | ● |
| Body | Add tuner section | ● |
| Body | Analysis of the wake-up control units | ● |
| Body | Auxiliary heater: Initialisation of the Telestart transmitter | ● |
| Body | Calibrating the expansion valves of the heat pump circuit | ● |
| Body | Calibration run for flap motors | ● |
| Body | Change personalisation data of remote key | ● |
| Body | Create boot file again | ● |
| Body | Delete the personal profile | ● |
| Body | Drain or fill the refrigerant circuit | ● |
| Body | Drain or fill the refrigerant circuit of the heat pump | ● |
| Body | DWA: Check by false alarm (with CA) | ● |
| Body | DWA: Read or delete alarm memory | ● |
| Body | Evaluate closed-circuit current monitoring | ● |
| Body | Evaluate state of battery charge | ● |
| Body | Flexible diagnosis module | ● |
| Body | High-voltage safety: Status | ● |
| Body | HIP module reset | ● |
| Body | Ignition key: Personalisation number | ● |
| Body | Individual test for aerials in vehicle | ● |
| Body | Initialise power window regulators | ● |
| Body | Initialise rain sensor | ● |
| Body | Initialise slide/tilt sunroof | ● |
| Body | Initialise slide/tilt sunroof. | ● |
| Body | Initialise window regulators | ● |
| Body | Lock and enable master key | ● |
| Body | Lock and enable remote control key | ● |
| Body | Log on mobile phone | ● |
| Body | MOST ring: Store configuration | ● |
| Body | MOST: storing the desired configuration | ● |
| Body | Navigation system: DVD lock | ● |
| Body | Power management: Evaluating the battery state of charge | ● |
| Body | Power-down command | ● |
| Body | Rain sensor initialisation | ● |
| Body | Recode seat-occupancy mat | ● |
| Body | Register battery replacement | ● |
| Body | Release electric auxiliary heater | ● |
| Body | Ride height sensors: Start-up | ● |
| Body | Roll-over protection system | ● |
| Body | Run-in protection for A/C compressor | ● |
| Body | Safety system (airbag): Coding data | ● |
| Body | Seat occupancy detection, front passenger | ● |
| Body | Teach in front wiper | ● |
| Body | ZGM: FlexRay initialisation | ● |
| Body | Newly address the air distribution flap motors | ● |
| Chassis and suspension | Workshop mode, Automatic Hold brake | ● |
| Chassis and suspension | Adjustment of steering torque sensor | ● |
| Chassis and suspension | Adjustment of the driving dynamics sensors | ● |
| Chassis and suspension | Brake bleeding procedure | ● |

| Part | Components | Status |
|------------------------|---|--------|
| Chassis and suspension | DSC control unit adjustment | ● |
| Chassis and suspension | DSC: Bleeding routine | ● |
| Chassis and suspension | DSC: Brake line mix-up test | ● |
| Chassis and suspension | DSC: Brake line reversal check | ● |
| Chassis and suspension | DSC: Pressure sensor adjustment | ● |
| Chassis and suspension | DSC: Sensor adjustment | ● |
| Chassis and suspension | DSC: Steering angle sensor adjustment | ● |
| Chassis and suspension | PSC adjustment | ● |
| Chassis and suspension | PSC: Steering start-up | ● |
| Chassis and suspension | Service function, pressure encoding | ● |
| Chassis and suspension | Start-up for brake pedal travel sensor | ● |
| Chassis and suspension | Start-up, Automatic Hold brake | ● |
| Driver assistance | All-round vision camera: Check of the programming | ● |
| Driver assistance | HUD: - Setting picture geometry | ● |
| Driver assistance | KAFAS: Calibration | ● |
| Driver assistance | Pressure coding service function, RDC integrated | ● |
| Driver assistance | Replace combiner | ● |
| Driver assistance | TLC: Calibrate vibration motor | ● |
| Engine | Activation fuel pump control module | ● |
| Engine | Activation/deactivation terminal 15 | ● |
| Engine | Adaptation of fuel quantity control valve | ● |
| Engine | Adaptation, hot film air mass meter | ● |
| Engine | Adjusting the starting torque | ● |
| Engine | Adjustment of exhaust-gas recirculation | ● |
| Engine | Adjustment of idle speed | ● |
| Engine | Adjustment, consumption calculation | ● |
| Engine | Automatic engine start-stop function: Starter exchange | ● |
| Engine | Automatic engine start-stop function: Teach in zero-gear sensor | ● |
| Engine | Bleeding the fuel system | ● |
| Engine | Charging the high-voltage battery: Read out history of last charging procedures | ● |
| Engine | Clear adaptations | ● |
| Engine | Composition of the high-voltage battery unit: Read out serial numbers | ● |
| Engine | Compression test | ● |
| Engine | Consumption calculation adjustment | ● |
| Engine | Delete install mode | ● |
| Engine | Diesel particulate filter: - Request regeneration | ● |
| Engine | Diesel particulate filter: Replacement | ● |
| Engine | Diesel particulate filter: Request regeneration | ● |
| Engine | DME: Clear adaptations | ● |
| Engine | DME: Delete adaptation variable camshaft timing control | ● |
| Engine | EGR adaptation | ● |
| Engine | EGS: Reset adaptation values | ● |
| Engine | EGS: Teach in neutral position | ● |
| Engine | EGS: transmission fluid adjustment | ● |
| Engine | Electronic immobiliser (EWS): Reset starter lock | ● |
| Engine | EME: Delete install mode | ● |
| Engine | EME: Read out the adjustment value of the rotor position sensor | ● |
| Engine | EME: Reset vacuum pump operating time | ● |
| Engine | EME: Rotor position sensor adjustment | ● |
| Engine | EME: Teach in parking lock module | ● |
| Engine | Engine control: Read measured value | ● |
| Engine | Engine operating values record | ● |
| Engine | European on-board diagnosis readiness codes | ● |
| Engine | EWS adjustment | ● |
| Engine | EWS starting value | ● |
| Engine | Exhaust-gas recirculation | ● |
| Engine | Fuel consumption display adjustment | ● |
| Engine | Fuel quality identification | ● |
| Engine | Fuel tank pressure sensor adjustment | ● |
| Engine | Gear sensor | ● |
| Engine | Idle speed adjustment | ● |
| Engine | Injection quantity compensation | ● |
| Engine | Internal engine pressure | ● |
| Engine | Learn Valvetronic limit positions | ● |
| Engine | Mass meter | ● |
| Engine | Mean quantity adaptation | ● |
| Engine | MSA: Read history memory | ● |
| Engine | MSA: System check | ● |

| Part | Components | Status |
|-------------|--|--------|
| Engine | On-board Diagnosis Readiness Codes | ● |
| Engine | RDME: Delete install mode | ● |
| Engine | Reading out the readiness codes | ● |
| Engine | Regulation of switching speed | ● |
| Engine | Release correction, additive level 1 | ● |
| Engine | Release correction, additive level 2 | ● |
| Engine | REME: Delete install mode | ● |
| Engine | Reset adaptation values | ● |
| Engine | Reset production mode | ● |
| Engine | Reset production mode, preheating control unit | ● |
| Engine | Reset starter lock | ● |
| Engine | Reset the internal ELV fault counter | ● |
| Engine | Service start range extender | ● |
| Engine | Smooth running control | ● |
| Engine | Starting torque adjustment | ● |
| Engine | Starting up the high-voltage battery unit | ● |
| Engine | Start-up, fuel pump control | ● |
| Engine | Teach in drive position actuator | ● |
| Engine | Transmission control unit: Reset adaptation values | ● |
| Engine | Valvetronic adaptation limit positions | ● |
| Engine | VANOS adaptation | ● |
| Maintenance | Enabling, navigation, automatic | ○ |
| Maintenance | Manual enabling of navigation function | ○ |
| Body | Updating online services | ○ |

Coding List

| Model Series | Systems | Coding |
|--------------|--|--------|
| R50 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R50 | AIC Automatic Interval Control | ● |
| R50 | CVM Convertible top module | ● |
| R50 | DME Digital Engine/Gearbox Electronic 2 | ● |
| R50 | EWS Electronic immobilizer | ● |
| R50 | KOM Instrument cluster | ● |
| R50 | KOM2 additional instruments | ● |
| R50 | LEW Steering-angle sensor | ● |
| R50 | MRS Multiple Restraint System IV | ● |
| R50 | PDC Park Distance Control | ● |
| R50 | RAD Radio | ● |
| R50 | SHD Sliding/tilting sunroof | ● |
| R50 | ULF Universal charging and hands-free facility | ● |
| R50 | VID Video module | ● |
| R50 | ZKE Central body electronics BC1 | ● |
| R52 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R52 | AIC Automatic Interval Control | ● |
| R52 | CVM Convertible top module | ● |
| R52 | DME Digital Engine/Gearbox Electronic 2 | ● |
| R52 | EWS Electronic immobilizer | ● |
| R52 | KOM Instrument cluster | ● |
| R52 | KOM2 additional instruments | ● |
| R52 | LEW Steering-angle sensor | ● |
| R52 | MRS Multiple Restraint System IV | ● |
| R52 | PDC Park Distance Control | ● |
| R52 | RAD Radio | ● |
| R52 | SHD Sliding/tilting sunroof | ● |
| R52 | ULF Universal charging and hands-free facility | ● |
| R52 | VID Video module | ● |
| R52 | ZKE Central body electronics BC1 | ● |
| R53 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R53 | AIC Automatic Interval Control | ● |
| R53 | CVM Convertible top module | ● |
| R53 | DME Digital Engine/Gearbox Electronic 2 | ● |
| R53 | EWS Electronic immobilizer | ● |
| R53 | KOM Instrument cluster | ● |
| R53 | KOM2 additional instruments | ● |
| R53 | LEW Steering-angle sensor | ● |
| R53 | MRS Multiple Restraint System IV | ● |
| R53 | PDC Park Distance Control | ● |
| R53 | RAD Radio | ● |
| R53 | SHD Sliding/tilting sunroof | ● |
| R53 | ULF Universal charging and hands-free facility | ● |
| R53 | VID Video module | ● |
| R53 | ZKE Central body electronics BC1 | ● |
| R55 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R55 | AHM Trailer module | ● |
| R55 | CA Comfort access system | ● |
| R55 | CAS Car Access System | ● |
| R55 | CCC-A Applications | ● |
| R55 | CCC-ANT Aerial tuner | ● |
| R55 | CCC-B0 User interface | ● |
| R55 | CCC-B0 User interface | ● |

| Model Series | Systems | Coding |
|--------------|--|--------|
| R55 | CCC-GW Gateway | ● |
| R55 | CVM Convertible top module | ● |
| R55 | DAB Digital tuner | ● |
| R55 | DME Motor Electronics | ● |
| R55 | EPS Electronic Power Steering | ● |
| R55 | FRM Footwell module | ● |
| R55 | IHKA Integrated automatic heating/air conditioning | ● |
| R55 | INSTR Instrument cluster | ● |
| R55 | JBE Junction-box electronics | ● |
| R55 | PDC Park Distance Control | ● |
| R55 | SHD Sliding/tilting sunroof | ● |
| R55 | SZL Switch centre, steering column | ● |
| R55 | ULF-SBX Interface box | ● |
| R55 | ULF-SBX-H Interface box High | ● |
| R56 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R56 | AHM Trailer module | ● |
| R56 | CA Comfort access system | ● |
| R56 | CAS Car Access System | ● |
| R56 | CCC-A Applications | ● |
| R56 | CCC-ANT Aerial tuner | ● |
| R56 | CCC-B0 User interface | ● |
| R56 | CCC-B0 User interface | ● |
| R56 | CCC-GW Gateway | ● |
| R56 | CVM Convertible top module | ● |
| R56 | DAB Digital tuner | ● |
| R56 | DME Motor Electronics | ● |
| R56 | EPS Electronic Power Steering | ● |
| R56 | FRM Footwell module | ● |
| R56 | IHKA Integrated automatic heating/air conditioning | ● |
| R56 | INSTR Instrument cluster | ● |
| R56 | JBE Junction-box electronics | ● |
| R56 | PDC Park Distance Control | ● |
| R56 | SHD Sliding/tilting sunroof | ● |
| R56 | SZL Switch centre, steering column | ● |
| R56 | ULF-SBX Interface box | ● |
| R56 | ULF-SBX-H Interface box High | ● |
| R57 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R57 | AHM Trailer module | ● |
| R57 | CA Comfort access system | ● |
| R57 | CAS Car Access System | ● |
| R57 | CCC-A Applications | ● |
| R57 | CCC-ANT Aerial tuner | ● |
| R57 | CCC-B0 User interface | ● |
| R57 | CCC-B0 User interface | ● |
| R57 | CCC-GW Gateway | ● |
| R57 | CVM Convertible top module | ● |
| R57 | DAB Digital tuner | ● |
| R57 | DME Motor Electronics | ● |
| R57 | EPS Electronic Power Steering | ● |
| R57 | FRM Footwell module | ● |
| R57 | IHKA Integrated automatic heating/air conditioning | ● |
| R57 | INSTR Instrument cluster | ● |
| R57 | JBE Junction-box electronics | ● |
| R57 | PDC Park Distance Control | ● |
| R57 | SHD Sliding/tilting sunroof | ● |
| R57 | SZL Switch centre, steering column | ● |

| Model Series | Systems | Coding |
|--------------|--|--------|
| R57 | ULF-SBX Interface box | ● |
| R57 | ULF-SBX-H Interface box High | ● |
| R58 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R58 | AHM Trailer module | ● |
| R58 | CA Comfort access system | ● |
| R58 | CAS Car Access System | ● |
| R58 | CCC-A Applications | ● |
| R58 | CCC-ANT Aerial tuner | ● |
| R58 | CCC-B0 User interface | ● |
| R58 | CCC-B0 User interface | ● |
| R58 | CCC-GW Gateway | ● |
| R58 | CVM Convertible top module | ● |
| R58 | DAB Digital tuner | ● |
| R58 | DME Motor Electronics | ● |
| R58 | EPS Electronic Power Steering | ● |
| R58 | FRM Footwell module | ● |
| R58 | IHKA Integrated automatic heating/air conditioning | ● |
| R58 | INSTR Instrument cluster | ● |
| R58 | JBE Junction-box electronics | ● |
| R58 | PDC Park Distance Control | ● |
| R58 | SHD Sliding/tilting sunroof | ● |
| R58 | SZL Switch centre, steering column | ● |
| R58 | ULF-SBX Interface box | ● |
| R58 | ULF-SBX-H Interface box High | ● |
| R59 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R59 | AHM Trailer module | ● |
| R59 | CA Comfort access system | ● |
| R59 | CAS Car Access System | ● |
| R59 | CCC-A Applications | ● |
| R59 | CCC-ANT Aerial tuner | ● |
| R59 | CCC-B0 User interface | ● |
| R59 | CCC-B0 User interface | ● |
| R59 | CCC-GW Gateway | ● |
| R59 | CVM Convertible top module | ● |
| R59 | DAB Digital tuner | ● |
| R59 | DME Motor Electronics | ● |
| R59 | EPS Electronic Power Steering | ● |
| R59 | FRM Footwell module | ● |
| R59 | IHKA Integrated automatic heating/air conditioning | ● |
| R59 | INSTR Instrument cluster | ● |
| R59 | JBE Junction-box electronics | ● |
| R59 | PDC Park Distance Control | ● |
| R59 | SHD Sliding/tilting sunroof | ● |
| R59 | SZL Switch centre, steering column | ● |
| R59 | ULF-SBX Interface box | ● |
| R59 | ULF-SBX-H Interface box High | ● |
| R60 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R60 | AHM Trailer module | ● |
| R60 | CA Comfort access system | ● |
| R60 | CAS Car Access System | ● |
| R60 | CCC-A Applications | ● |
| R60 | CCC-ANT Aerial tuner | ● |
| R60 | CCC-B0 User interface | ● |
| R60 | CCC-B0 User interface | ● |
| R60 | CCC-GW Gateway | ● |
| R60 | CVM Convertible top module | ● |

| Model Series | Systems | Coding |
|--------------|--|--------|
| R60 | DAB Digital tuner | ● |
| R60 | DME Motor Electronics | ● |
| R60 | EPS Electronic Power Steering | ● |
| R60 | FRM Footwell module | ● |
| R60 | IHKA Integrated automatic heating/air conditioning | ● |
| R60 | INSTR Instrument cluster | ● |
| R60 | JBE Junction-box electronics | ● |
| R60 | PDC Park Distance Control | ● |
| R60 | SHD Sliding/tilting sunroof | ● |
| R60 | SZL Switch centre, steering column | ● |
| R60 | ULF-SBX Interface box | ● |
| R60 | ULF-SBX-H Interface box High | ● |
| R61 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R61 | AHM Trailer module | ● |
| R61 | CA Comfort access system | ● |
| R61 | CAS Car Access System | ● |
| R61 | CCC-A Applications | ● |
| R61 | CCC-ANT Aerial tuner | ● |
| R61 | CCC-B0 User interface | ● |
| R61 | CCC-B0 User interface | ● |
| R61 | CCC-GW Gateway | ● |
| R61 | CVM Convertible top module | ● |
| R61 | DAB Digital tuner | ● |
| R61 | DME Motor Electronics | ● |
| R61 | EPS Electronic Power Steering | ● |
| R61 | FRM Footwell module | ● |
| R61 | IHKA Integrated automatic heating/air conditioning | ● |
| R61 | INSTR Instrument cluster | ● |
| R61 | JBE Junction-box electronics | ● |
| R61 | PDC Park Distance Control | ● |
| R61 | SHD Sliding/tilting sunroof | ● |
| R61 | SZL Switch centre, steering column | ● |
| R61 | ULF-SBX Interface box | ● |
| R61 | ULF-SBX-H Interface box High | ● |
| F56 | ACSM Crash Safety Module | ● |
| F56 | TRSVc allround-view camera | ● |
| F56 | DME Digital Motor Electronics | ● |
| F56 | EGS transmission management | ● |
| F56 | DSC Dynamic Stability Control | ● |
| F56 | DVDC DVD Changer | ● |
| F56 | AMPT Top Hi-Fi amplifier | ● |
| F56 | CAS Car Access System | ● |
| F56 | FZD Function centre, roof | ● |
| F56 | KAFAS Camera-based driver-assistance systems | ● |
| F56 | INSTR Instrument cluster | ● |
| F56 | CBX-ECALL Combox emergency call | ● |
| F56 | CIC Car Information Computer | ● |
| F56 | CON Controller | ● |
| F56 | IHKA Integrated automatic heating/air conditioning | ● |
| F57 | CAS Car access system | ▲ |
| F57 | Engine-DME Digital Motor Electronics | ▲ |
| F57 | EGS transmission management | ▲ |
| F57 | AL active steering | ▲ |
| F57 | ABS-DSC Dynamic Stability Control | ▲ |
| F57 | Airbag-ACSM Crash Safety Module | ▲ |
| F57 | AHM trailer module | ▲ |

| Model Series | Systems | Coding |
|--------------|--|--------|
| F57 | AMPH Hi-Fi amplifier | ▲ |
| F57 | AMPT Top Hi-Fi amplifier | ▲ |
| F57 | ASD Active Sound Design | ▲ |
| F57 | CBX-ECALL ComBox emergency call | ▲ |
| F57 | CIC Car Information Computer | ▲ |
| F57 | CON Controller | ▲ |
| F57 | DSP Digital Sound Processor | ▲ |
| F57 | DVDC DVD changer | ▲ |
| F57 | FZD Function centre, roof | ▲ |
| F57 | HKL Automatic luggage compartment lid actuation | ▲ |
| F57 | IHKA Integrated automatic heating/air conditioning | ▲ |
| F57 | INSTR Instrument cluster | ▲ |
| F57 | KAFAS Camera-based driver-assistance systems | ▲ |
| F57 | PMA Parking assistant | ▲ |
| F57 | SMFA Seat module, driver | ▲ |
| F57 | Airbag-SZL Switch centre, steering column | ▲ |
| F57 | TRVC allround-view camera | ▲ |
| F57 | TBX Touchbox | ▲ |
| F57 | ZGM Central Gateway Control Module | ▲ |

Programing List

| Model Series | Systems | Programming |
|--------------|--|-------------|
| R55 | MRS/AB Airbag/ACSM | ● |
| R55 | AHM Trailer module | ● |
| R55 | AMPH Hi-Fi amplifier | ● |
| R55 | CA Comfort access system | ● |
| R55 | CAN communication analysis | ○ |
| R55 | CCC-A Applications | ○ |
| R55 | CCC-ANT Aerial tuner | ○ |
| R55 | CCC-ASK Audio system controller | ○ |
| R55 | CCC-B0 User interface | ○ |
| R55 | CCC-GW Gateway | ○ |
| R55 | CDC CD Changer | ○ |
| R55 | CID Central information display | ● |
| R55 | CVM/CVM2 Convertible top module | ● |
| R55 | DAB Digital tuner | ○ |
| R55 | FRM footwell module | ● |
| R55 | IBOC Digital tuner US | ○ |
| R55 | IHKA Heater/automatic A/C control | ● |
| R55 | IHKS Integrated heating/air-conditioning control | ● |
| R55 | IHS Integrated heating control | ● |
| R55 | INSTR Instrument cluster | ● |
| R55 | JBE Junction-box electronics | ● |
| R55 | JNAV Navigation system, Japan | ○ |
| R55 | MJOY MINI joystick | ● |
| R55 | MOST system analysis | ○ |
| R55 | PDC Park distance control | ● |
| R55 | RAD Radio | ○ |
| R55 | RAD2-B0 User interface | ○ |
| R55 | RAD2-GW Gateway | ○ |
| R55 | SDARS Satellite tuner | ○ |
| R55 | SHD Sliding/tilting sunroof | ● |
| R55 | SZL Switch centre, steering column | ● |
| R55 | ULF-SBX Interface box | ○ |
| R55 | ULF-SBX-H Interface box High | ○ |
| R55 | VM Video Module | ○ |
| R55 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R55 | EPS Electronic Power Steering | ● |
| R55 | RDC Tyre pressure control | ● |
| R55 | CAS Car Access System | ● |
| R55 | DME/DDE (Engine Electronics) | ● |
| R55 | EGS/AGS (Transmission Control) | ● |
| R56 | MRS/AB Airbag/ACSM | ● |
| R56 | AHM Trailer module | ● |
| R56 | AMPH Hi-Fi amplifier | ● |
| R56 | CA Comfort access system | ● |
| R56 | CAN communication analysis | ○ |
| R56 | CCC-A Applications | ○ |
| R56 | CCC-ANT Aerial tuner | ○ |
| R56 | CCC-ASK Audio system controller | ○ |
| R56 | CCC-B0 User interface | ○ |

| Model Series | Systems | Programming |
|--------------|--|-------------|
| R56 | CCC-GW Gateway | ○ |
| R56 | CDC CD Changer | ○ |
| R56 | CID Central information display | ● |
| R56 | CVM/CVM2 Convertible top module | ● |
| R56 | DAB Digital tuner | ○ |
| R56 | FRM footwell module | ● |
| R56 | IBOC Digital tuner US | ○ |
| R56 | IHKA Heater/automatic A/C control | ● |
| R56 | IHKS Integrated heating/air-conditioning control | ● |
| R56 | IHS Integrated heating control | ● |
| R56 | INSTR Instrument cluster | ● |
| R56 | JBE Junction-box electronics | ● |
| R56 | JNAV Navigation system, Japan | ○ |
| R56 | MJOY MINI joystick | ● |
| R56 | MOST system analysis | ○ |
| R56 | PDC Park distance control | ● |
| R56 | RAD Radio | ○ |
| R56 | RAD2-BO User interface | ○ |
| R56 | RAD2-GW Gateway | ○ |
| R56 | SDARS Satellite tuner | ○ |
| R56 | SHD Sliding/tilting sunroof | ● |
| R56 | SZL Switch centre, steering column | ● |
| R56 | ULF-SBX Interface box | ○ |
| R56 | ULF-SBX-H Interface box High | ○ |
| R56 | VM Video Module | ○ |
| R56 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R56 | EPS Electronic Power Steering | ● |
| R56 | RDC Tyre pressure control | ● |
| R56 | CAS Car Access System | ● |
| R56 | DME/DDE (Engine Electronics) | ● |
| R56 | EGS/AGS (Transmission Control) | ● |
| R57 | MRS/AB Airbag/ACSM | ● |
| R57 | AHM Trailer module | ● |
| R57 | AMPH Hi-Fi amplifier | ● |
| R57 | CA Comfort access system | ● |
| R57 | CAN communication analysis | ○ |
| R57 | CCC-A Applications | ○ |
| R57 | CCC-ANT Aerial tuner | ○ |
| R57 | CCC-ASK Audio system controller | ○ |
| R57 | CCC-BO User interface | ○ |
| R57 | CCC-GW Gateway | ○ |
| R57 | CDC CD Changer | ○ |
| R57 | CID Central information display | ● |
| R57 | CVM/CVM2 Convertible top module | ● |
| R57 | DAB Digital tuner | ○ |
| R57 | FRM footwell module | ● |
| R57 | IBOC Digital tuner US | ○ |
| R57 | IHKA Heater/automatic A/C control | ● |
| R57 | IHKS Integrated heating/air-conditioning control | ● |
| R57 | IHS Integrated heating control | ● |
| R57 | INSTR Instrument cluster | ● |
| R57 | JBE Junction-box electronics | ● |

| Model Series | Systems | Programming |
|--------------|---------------------------------------|-------------|
| R57 | JNAV Navigation system, Japan | ○ |
| R57 | MJOY MINI joystick | ● |
| R57 | MOST system analysis | ○ |
| R57 | PDC Park distance control | ● |
| R57 | RAD Radio | ○ |
| R57 | RAD2-BO User interface | ○ |
| R57 | RAD2-GW Gateway | ○ |
| R57 | SDARS Satellite tuner | ○ |
| R57 | SHD Sliding/tilting sunroof | ● |
| R57 | SZL Switch centre, steering column | ● |
| R57 | ULF-SBX Interface box | ○ |
| R57 | ULF-SBX-H Interface box High | ○ |
| R57 | VM Video Module | ○ |
| R57 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R57 | EPS Electronic Power Steering | ● |
| R57 | RDC Tyre pressure control | ● |
| R57 | CAS Car Access System | ● |
| R57 | DME/DDE (Engine Electronics) | ● |
| R57 | EGS/AGS (Transmission Control) | ● |
| R58 | MRS/AB Airbag/ACSM | ● |
| R58 | AHM Trailer module | ● |
| R58 | AMPH Hi-Fi amplifier | ● |
| R58 | CA Comfort access system | ● |
| R58 | CBX-ECALL Combox emergency call | ○ |
| R58 | CHAMP-BO User interface | ○ |
| R58 | CHAMP-GW Gateway | ○ |
| R58 | CID Central information display | ● |
| R58 | FRM footwell module | ● |
| R58 | IBOC Digital tuner US | ○ |
| R58 | IHKA Heater/automatic A/C control | ● |
| R58 | INSTR Instrument cluster | ● |
| R58 | JBE Junction-box electronics | ● |
| R58 | MJOY MINI joystick | ● |
| R58 | PDC Park distance control | ● |
| R58 | SHD Sliding/tilting sunroof | ● |
| R58 | SZL Steering column switch centre 2 | ● |
| R58 | ULF-SBX Interface box | ○ |
| R58 | ULF-SBX-H Interface box High | ○ |
| R58 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R58 | EDC Damper Control | ○ |
| R58 | EPS Electronic Power Steering | ● |
| R58 | CAS Car Access System | ● |
| R58 | DME/DDE (Engine Electronics) | ● |
| R58 | EGS/AGS (Transmission Control) | ● |
| R59 | MRS/AB Airbag/ACSM | ● |
| R59 | AHM Trailer module | ● |
| R59 | AMPH Hi-Fi amplifier | ● |
| R59 | CA Comfort access system | ● |
| R59 | CBX-ECALL Combox emergency call | ○ |
| R59 | CHAMP-BO User interface | ○ |
| R59 | CHAMP-GW Gateway | ○ |
| R59 | CID Central information display | ● |

| Model Series | Systems | Programming |
|--------------|---------------------------------------|-------------|
| R59 | FRM footwell module | ● |
| R59 | IBOC Digital tuner US | ○ |
| R59 | IHKA Heater/automatic A/C control | ● |
| R59 | INSTR Instrument cluster | ● |
| R59 | JBE Junction-box electronics | ● |
| R59 | MJOY MINI joystick | ● |
| R59 | PDC Park distance control | ● |
| R59 | SHD Sliding/tilting sunroof | ● |
| R59 | SZL Steering column switch centre 2 | ● |
| R59 | ULF-SBX Interface box | ○ |
| R59 | ULF-SBX-H Interface box High | ○ |
| R59 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R59 | EDC Damper Control | ○ |
| R59 | EPS Electronic Power Steering | ● |
| R59 | CAS Car Access System | ● |
| R59 | DME/DDE (Engine Electronics) | ● |
| R59 | EGS/AGS (Transmission Control) | ● |
| R60 | MRS/AB Airbag/ACSM | ● |
| R60 | AHM Trailer module | ● |
| R60 | AMPH Hi-Fi amplifier | ● |
| R60 | CA Comfort access system | ● |
| R60 | CBX-ECALL Combox emergency call | ○ |
| R60 | CHAMP-B0 User interface | ○ |
| R60 | CIC-GW Gateway | ○ |
| R60 | CID Central information display | ● |
| R60 | FRM footwell module | ● |
| R60 | IBOC Digital tuner US | ○ |
| R60 | IHKA Heater/automatic A/C control | ● |
| R60 | INSTR Instrument cluster | ● |
| R60 | JBE Junction-box electronics | ● |
| R60 | MJOY MINI joystick | ● |
| R60 | PDC Park distance control | ● |
| R60 | SHD Sliding/tilting sunroof | ● |
| R60 | SZL Steering column switch centre 2 | ● |
| R60 | ULF-SBX Interface box | ○ |
| R60 | ULF-SBX-H Interface box High | ○ |
| R60 | ABS/ASC/DSC Dynamic Stability Control | ● |
| R60 | EDC Damper Control | ○ |
| R60 | EPS Electronic Power Steering | ● |
| R60 | CAS Car Access System | ● |
| R60 | DME/DDE (Engine Electronics) | ● |
| R60 | EGS/AGS (Transmission Control) | ● |
| F56 | Airbag-ACSM Crash Safety Module | ● |
| F56 | TRSVc allround-view camera | ● |
| F56 | ZGM Central Gateway Control Module | ● |
| F56 | Engine-DME Digital Motor Electronics | ● |
| F56 | EGS transmission management | ● |
| F56 | ABS-DSC Dynamic Stability Control | ● |
| F56 | PMA Parking assistant | ● |
| F56 | EPS Electronic Power Steering | ● |
| F56 | DVDC DVD changer | ● |
| F56 | CSM Car Sharing Module | ● |

| Model Series | Systems | Programming |
|--------------|--|-------------|
| F56 | TBX Touchbox | ● |
| F56 | AMPT Top Hi-Fi amplifier | ● |
| F56 | ASD Active Sound Design | ● |
| F56 | CAS Car access system | ● |
| F56 | LHML LED main light module, left | ● |
| F56 | LHMR LED main light module, right | ● |
| F56 | FZD Function centre, roof | ● |
| F56 | KAFAS Camera-based driver-assistance systems | ● |
| F56 | INSTR Instrument cluster | ● |
| F56 | CBX-ECALL ComBox emergency call | ● |
| F56 | CIC Car Information Computer | ● |
| F56 | CON Controller | ● |
| F56 | IHKA Integrated automatic heating/air conditioning | ● |
| F57 | CAS Car access system | ▲ |
| F57 | Engine-DME Digital Motor Electronics | ▲ |
| F57 | EGS transmission management | ▲ |
| F57 | AL active steering | ▲ |
| F57 | ABS-DSC Dynamic Stability Control | ▲ |
| F57 | Airbag-ACSM Crash Safety Module | ▲ |
| F57 | AHM trailer module | ▲ |
| F57 | AMPH Hi-Fi amplifier | ▲ |
| F57 | AMPT Top Hi-Fi amplifier | ▲ |
| F57 | ASD Active Sound Design | ▲ |
| F57 | CBX-ECALL ComBox emergency call | ▲ |
| F57 | CIC Car Information Computer | ▲ |
| F57 | CON Controller | ▲ |
| F57 | DSP Digital Sound Processor | ▲ |
| F57 | DVDC DVD changer | ▲ |
| F57 | FZD Function centre, roof | ▲ |
| F57 | HKL Automatic luggage compartment lid actuation | ▲ |
| F57 | IHKA Integrated automatic heating/air conditioning | ▲ |
| F57 | INSTR Instrument cluster | ▲ |
| F57 | KAFAS Camera-based driver-assistance systems | ▲ |
| F57 | PMA Parking assistant | ▲ |
| F57 | SMFA Seat module, driver | ▲ |
| F57 | Airbag-SZL Switch centre, steering column | ▲ |
| F57 | TRVC allround-view camera | ▲ |
| F57 | TBX Touchbox | ▲ |
| F57 | ZGM Central Gateway Control Module | ▲ |

Retrofit List

| Main Chassis | Retrofit Item | Retrofit |
|--------------|--|----------|
| R56 | Retrofit, 40 Ah AGM battery | ● |
| R56 | Retrofit, 46 Ah battery | ● |
| R56 | Retrofit, 55 Ah battery | ● |
| R56 | Retrofit, 60 Ah AGM battery | ● |
| R56 | Retrofit, 70 Ah AGM battery | ● |
| R56 | Retrofit, 70 Ah battery | ● |
| R56 | Retrofit, iPod interface | ● |
| R56 | Retrofit, satellite tuner | ● |
| R56 | Conversion, oil-maintenance interval Otto: 24 months / 25000 km / 16000 mi - Diesel: 24 months / 15000 km / 10000 mi | ● |
| R56 | Conversion, oil service interval 24 months/12000 km/8000 mi | ● |
| R56 | Conversion, oil service interval 12 months/8000 km/5000 mi | ● |
| R56 | Conversion, oil service interval 24 months/6000 km/4000 mi | ● |
| R56 | Conversion, oil service interval 24 months/30000 km/18000 mi | ● |
| R56 | Conversion, oil service interval 24 months/24000 km/15000 mi | ● |
| R56 | Conversion, oil service interval 24 months/12000 km/8000 mi | ● |
| R56 | Conversion, oil service interval 18 months/15000 km/10000 mi | ● |
| R56 | Conversion, oil service interval 12 months/15000 km/10000 mi | ● |
| R56 | Conversion, oil service interval 12 months/12000 km/8000 mi | ● |
| R56 | Retrofit, 25W xenon headlights | ● |
| R56 | Conversion, alternative frequency tracing activating | ● |
| R56 | Conversion, recirculating air circuit activation | ● |
| R56 | Conversion, recirculating air circuit deactivation | ● |
| R56 | Conversion, recirculating air circuit deactivation | ● |
| R56 | Conversion, recirculating air circuit activation | ● |
| R56 | Retrofit, bi-xenon headlights | ● |
| R56 | Retrofit, bicycle carrier | ● |
| R56 | Conversion, CAS remote control button of tailgate | ● |
| R56 | Conversion, CBS correction brake pad | ● |
| R56 | Conversion, change from Canadian to US version. | ● |
| R56 | Retrofit, on-board computer | ● |
| R56 | Retrofit, CD changer | ● |
| R56 | Retrofit, integrated automatic heating and air conditioning system | ● |
| R56 | Conversion, activate convenience opening | ● |
| R56 | Conversion, deactivate convenience opening | ● |
| R56 | Deactivate the convenient opening change action with the mechanical key | ● |
| R56 | Retrofit crankcase ventilation N16 (PCV) | ● |
| R56 | Conversion, activation and deactivation of the anti-theft alarm system via remote control or door lock | ● |
| R56 | Conversion, activation and deactivation of the anti-theft alarm system via remote control only | ● |
| R56 | Conversion, deactivate daytime driving lights | ● |
| R56 | Retrofit, digital tuner US | ● |
| R56 | Conversion, activate driver seat belt reminder | ● |
| R56 | Conversion, deactivate driver seat belt reminder. | ● |
| R56 | Conversion, activate driving school function | ● |
| R56 | Conversion, robustness increase of steering | ● |
| R56 | Retrofit, electrochromic interior rearview mirror | ● |
| R56 | Retrofit, seat heating, front | ● |
| R56 | Conversion replacement hang-on coupling | ● |
| R56 | Retrofit, iPod interface | ● |
| R56 | Conversion, activate one-touch function | ● |
| R56 | Retrofit, John Cooper Works Aerokit | ● |
| R56 | Retrofit, John Cooper Works sport brake | ● |
| R56 | Retrofit, John Cooper Works sports seat | ● |
| R56 | Conversion, activate John Cooper Works Tuning Kit | ● |
| R56 | Conversion, deactivate John Cooper Works Tuning Kit | ● |
| R56 | Conversion catalytic-converter replacement | ● |
| R56 | Conversion, language: Display and phone in Arabic with English and French (only for Gulf State versions) | ● |

| Main Chassis | Retrofit Item | Retrofit |
|--------------|--|----------|
| R56 | Conversion, language: Display and phone in Chinese with UK English (only for China) | ● |
| R56 | Conversion, language: Display and phone in Dutch with UK English and French (not for US and Asia versions) | ● |
| R56 | Conversion, language: Display and phone in English with French and Spanish (not for US and Asia versions) | ● |
| R56 | Conversion, language: Display and phone in French with Spanish and UK English (not for US and Asia versions) | ● |
| R56 | Conversion, language: Display and phone in German with French and UK English (not for US and Asia versions) | ● |
| R56 | Conversion, language: Display and phone in Hungarian with English and German (not for US and Asia versions) | ● |
| R56 | Conversion, language: Display and phone in Italian with German and UK English (not for US and Asia versions) | ● |
| R56 | Conversion, language: Display and phone in Korean with UK English (only for Korea) | ● |
| R56 | Conversion, language: Display and phone in Russian with UK English and German (not for US and Asia versions) | ● |
| R56 | Conversion, language: Display and phone in Spanish with French and UK English (not for US and Asia versions) | ● |
| R56 | Conversion, language: Display and phone in Swiss German with French and Italian (not for US and Asia versions) | ● |
| R56 | Retrofit LED fog lights | ● |
| R56 | Conversion, set automatic driving lights control to normal | ● |
| R56 | Conversion, set automatic driving lights control to sensitive | ● |
| R56 | Conversion, set automatic driving lights control to very sensitive | ● |
| R56 | Retrofit, MINI Connected | ● |
| R56 | Retrofit, MINI model revision | ● |
| R56 | Retrofit, Mission Control | ● |
| R56 | Conversion, activate MSA memory | ● |
| R56 | Conversion, deactivate MSA memory | ● |
| R56 | Conversion functional enhancement call waiting | ● |
| R56 | Retrofit, multifunction steering wheel | ● |
| R56 | Retrofit, John Cooper Works Aerodynamic package | ● |
| R56 | Retrofit, Park Distance Control, rear only | ● |
| R56 | Retrofit, passenger airbag deactivation | ● |
| R56 | Conversion, activate front passenger seat belt reminder | ● |
| R56 | Conversion, deactivate front passenger seat belt reminder | ● |
| R56 | Retrofit, accessory rear spoiler | ● |
| R56 | Conversion, set automatic driving lights control to normal | ● |
| R56 | Conversion, set automatic driving lights control to sensitive | ● |
| R56 | Retrofit, satellite tuner | ● |
| R56 | Retrofit, Sport suspension | ● |
| R56 | Retrofit, Sport steering wheel | ● |
| R56 | Measure N14 against super-knocking | ● |
| R56 | Retrofit, rear-mounted rack preparation | ● |
| R56 | Retrofit, temperature display for vehicles without on-board computer | ● |
| R56 | Retrofit, anti-theft alarm system | ● |
| R56 | Retrofit, trailer tow hitch | ● |
| R56 | Conversion to trailer with LED lights | ● |
| R56 | Conversion to trailer without LED lights | ● |
| R56 | Retrofit, Bluetooth universal charging and hands-free facility | ● |
| R56 | Conversion, change from US to Canadian version. | ● |
| R56 | Retrofit, USB / audio interface | ● |
| R56 | Retrofit, USB / audio interface | ● |