

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
CAPTUR/QM3/KABIN	Air conditioning	●	●	●	※	●	※	○	※	130 427 748 247
CAPTUR/QM3/KABIN	A. B. S.	●	●	●	●	●	●	●	●	303 012 573 752 584 522 369 092 618 583 247
CLIO II	Injection	●	●	●	●	●	※	※	●	367 660 633 548 579 301 478 375 474 648 220 199 247 457 153 605 459 036 284 691 166 324 590 461 736 697 718 676 722 680
CLIO II	Immobiliser	●	●	●	●	●	※	●	○	346 465 483 482 122 169
CLIO II	GAS INJ.	●	●	●	●	●	●	●	※	
CLIO II	Connection unit	●	●	●	●	●	※	●	※	320 495 065 689 730 540 413 721 679 703 741 700 670 693 732 709 746 710 747 250 055 494
CLIO II	Automatic gearbox	●	●	●	●	●	●	●	※	396 145 057 361 037 221 387 040 558 116 617 671 712 718 676 398 753 751 751
CLIO II	Airbag / pretensioners	●	●	●	●	●	●	●	※	734 694 751
CLIO II	Air conditioning	●	●	●	●	●	●	●	○	752 692 132 140 209 568 288 077 704 687 696 740 702 727 685 725 683 731 690
CLIO II	A. B. S.	●	●	●	●	●	※	●	※	089 752 573
CLIO II P2/3/4	Variable P. A. S.	●	●	●	●	○	○	●	○	127 752
CLIO II P2/3/4	Injection	●	●	●	●	●	●	※	※	367 660 633 548 579 301 478 474 648 220 199 247 153 605 459 036 284
CLIO II P2/3/4	Immobiliser	●	●	●	●	●	○	●	○	346 465 713 672
CLIO II P2/3/4	GAS INJ.	●	●	●	●	●	●	※	※	
CLIO II P2/3/4	Discharge lamp	●	●	●	●	●	○	○	○	
CLIO II P2/3/4	Connection unit	●	●	●	●	●	●	●	●	65
CLIO II P2/3/4	Automatic gearbox	●	●	●	●	●	●	●	※	120 396 145 057 473 474 248 361 037 221 387 040 558 116 617 753 751
CLIO II P2/3/4	Airbag / pretensioners	●	●	●	●	○	○	●	●	450 186 454 192 440 442 191 180 179 443 267 266 155 154 452 188
CLIO II P2/3/4	Air conditioning	●	●	●	●	●	○	●	○	
CLIO II P2/3/4	A. B. S.	●	●	●	●	●	※	●	※	089 752 573
CLIO II PH6	UCH	●	●	●	●	●	●	○	●	748 631 247 545 250
CLIO II PH6	Tracker	○	○	○	○	○	○	○	○	
CLIO II PH6	Injection	※	※	※	※	※	※	○	※	748 478 247
CLIO II PH6	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 632 366 247 566 450 186 440 321 449 185 439
CLIO II PH6	A. B. S.	○	○	○	○	○	○	○	○	
CLIO III	Variable P. A. S.	※	※	※	※	○	※	※	※	127 751 585 748 247
CLIO III	UPC	●	●	●	●	●	●	○	●	650 748 247
CLIO III	UCH	●	●	●	●	●	●	○	●	384 748 098 095 247 503 412 601 631 297 002 118 557 172 242 663 296 257 194 284 164
CLIO III	Tyres	●	●	●	●	○	●	○	●	556 226 748 426 475 247 653
CLIO III	Radio	○	○	○	○	○	○	○	○	
CLIO III	Parking assistance	※	※	※	※	○	※	○	※	107 748 247 609 649 083

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
CLIO III	Multimedia interface	○	○	○	○	○	○	○	○	
CLIO III	Multimed. connection	○	○	○	○	○	○	○	○	
CLIO III	Lighting	●	●	●	●	●	●	○	●	597 748 247 146 569 170 059 196 653
CLIO III	Instrument panel	※	※	※	※	※	※	○	※	050 050 348 348 050 050 348 348 272 271 050 348 529 245 635 403 402 401 400 748 247 553 253 455 241 530 419 552 150 284 364 626 142 617 421 175 278 352 005 178 435 532 119 110 600 090 006 521 652 174 351
CLIO III	Injection	※	※	※	※	※	※	※	※	748 367 660 633 160 159 158 157 311 099 572 227 543 203 659 436 478 247 474 462 199 247
CLIO III	Communications unit	○	○	○	○	○	○	○	○	
CLIO III	Automatic gearbox	※	※	※	※	※	※	※	○	470 753 387 749 750 752 480 748 120 057 247 473 474 248
CLIO III	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 752 632 366 137 502 247 566 190 184 448 507 189 440 442 180 179 443 267 266 155 154 452 188 743 657 669 264
CLIO III	Air conditioning	●	●	●	●	●	●	○	●	748 247 300 653 281
CLIO III	A. B. S.	●	●	●	●	●	●	※	○	640 234 056 464 573 752 650 748 089 117 207 247
CLIO IV	Variable P. A. S.	●	●	●	●	●	●	●	○	748 247
CLIO IV	UPC	●	●	●	●	●	●	○	●	129 528 748 650 395 161 046
CLIO IV	UCH	※	※	※	※	※	※	※	※	426 395 302 247 520 554 044 296
CLIO IV	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	※	748 247 131
CLIO IV	Radio	※	※	※	※	※	※	○	※	751 247 527 247 156 350 149
CLIO IV	Parking prox can	●	●	●	●	●	●	○	●	748 247 565 506 256 609 083
CLIO IV	Multimedia interface	●	●	●	●	●	●	○	○	247 304 606 601
CLIO IV	Instrument panel	●	●	●	●	●	●	○	●	635 247 129 142 175 352 006
CLIO IV	Injection	※	※	※	※	※	※	※	※	302 395 047 394 393 392 391 277 660 160 159 158 157 397 311 332 019 543 243 572 548 543 203 251 251 251 251 587 302 331 330 662 013 326 041 111 200 395 576 330 105 437 042 372 621 274 370 238 251 045 484 251 336 335 334 333 332 152 332 496 041 270 106 251 438 533 043 481 201 020 202 247 474 462 215 199 247 411 673
CLIO IV	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	748 095 247 135 123 520 518 287 604 134 139 138 501 488 011 141 479 133
CLIO IV	Communications unit	●	●	●	●	●	●	○	●	247 208 350 627 175 149
CLIO IV	Automatic gearbox	●	●	●	●	●	●	●	○	467 466 471 468 562 480 428 748 353 121 522 230 247 473
CLIO IV	Amplifier	●	●	●	●	●	●	○	●	748 247 596
CLIO IV	Airbag / pretensioners	○	○	○	○	○	○	○	○	
CLIO IV	Air conditioning	●	●	●	※	●	※	○	※	130 427 748 247
CLIO IV	A. B. S.	※	※	※	※	※	※	※	※	012 573 752 584 522 369 092 618 583 247

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
DUSTER PH2	UCH	※	※	※	※	※	※	※	※	426 395 302 247 520 554 044 296
DUSTER PH2	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	247 131
DUSTER PH2	Radio	※	※	※	※	※	※	○	※	751 247 247 350 149
DUSTER PH2	Multimedia interface	●	●	●	●	●	●	○	○	247 304 606 601
DUSTER PH2	Instrument panel	※	※	※	※	※	※	○	※	635 247 084 129 241 419 150 284 142 175 006
DUSTER PH2	Injection	※	※	※	※	※	※	※	※	302 395 047 394 393 392 391 429 277 329 660 160 159 158 157 397 311 332 019 543 243 572 102 548 543 203 251 251 251 251 587 302 331 330 662 013 326 041 111 200 395 576 330 105 437 042 372 621 274 370 238 251 045 484 251 336 335 334 333 332 152 332 496 041 239 270 106 251 438 533 043 481 201 020 202 247 474 462 215 199 247 138
DUSTER PH2	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	748 247 135 123 520 518 287 604 134 139 138 501 488 011 141 479 133
DUSTER PH2	Automatic gearbox	※	※	※	※	※	※	※	○	285 752 525 524 523 230 247
DUSTER PH2	Airbag / pretensioners	●	●	●	●	●	●	○	●	632 366 247
DUSTER PH2	Air conditioning	●	●	●	●	●	●	○	○	281 130 247 281
DUSTER PH2	A. B. S.	●	●	●	●	●	●	●	※	303 012 573 752 584 522 369 092 618 583 247
DUSTER PH2	4 wheels drive	●	●	●	●	●	●	●	○	378 129 573 247 653
ESPACE	Instrument panel	●	※	※	●	○	※	※	●	752 724 682 722 680 742 705 168 456 385 665 717 675 536 535 356 534 355 354 537 357 738 699 646 144
ESPACE	Injection	●	●	●	●	●	●	※	※	225 478 202 220 723 681 737 698 457 605 036 714 673 315 316 718 676 726 684 736 697 745 708 718 676 722 680
ESPACE	Immobiliser	●	●	●	●	●	※	●	※	709 746 700 670 483 482 167 169 483 482 224
ESPACE	Heater	●	●	●	●	●	●	○	○	
ESPACE	Discharge lamp	●	●	●	●	●	○	●	○	
ESPACE	Connection unit	●	●	●	●	●	※	●	●	078 729 688 711 668 537 357 654 655 197 544 717 675 249 416 738 699 744 707 646 078 144
ESPACE	Automatic gearbox	●	●	●	●	●	●	●	※	396 145 057 387 040 558 116 617 671 712 718 038 398 753 751 751
ESPACE	Airbag / pretensioners	●	●	●	●	●	●	●	○	752 686 728 706 743
ESPACE	Air conditioning	●	●	●	●	○	●	●	●	236 235 071 070 069 068
ESPACE	A. B. S.	●	●	●	●	●	●	●	○	752 573
ESPACE IV	UCH	●	●	●	●	●	●	○	●	642 226 748 009 349 629 094 286 097 475 571 426 252 247 487 060 328 421 364 624 647 058 291 297 362 294 108 653 593 374 054 557 498 210 555 172 296 625 194 162 284 293 164
ESPACE IV	Parking brake	●	●	●	●	●	●	○	●	100 748 546 658 542 247 645
ESPACE IV	Parking assistance	●	●	●	●	○	●	○	●	748 247 609 649 083

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
ESPACE IV	Instrument panel	●	●	●	●	●	●	○	●	409 323 173 748 247 455 101 406 171 433 418 417 638 637 150 284 364 381 062 626 290 142 617 421 175 656 278 653 627 602 352 435 006
ESPACE IV	Injection	●	●	●	●	●	●	※	※	043 589 277 748 367 324 660 633 166 543 203 659 478 247 474 215 199 605 036
ESPACE IV	Heater	●	●	●	●	●	●	○	○	247 231 232
ESPACE IV	Hands-free kit	●	●	●	●	●	●	○	●	100 053 561 376 748 752 247 350
ESPACE IV	Discharge lamp	●	●	●	●	●	●	○	●	748 247 653 127
ESPACE IV	Automatic gearbox	●	●	●	●	●	●	●	○	383 752 748 015 057 248
ESPACE IV	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 752 632 366 567 319 137 502 247 566
ESPACE IV	Air conditioning	●	●	●	●	●	●	○	●	748 247 612 300 194 512 039 034 177 048 125 281
ESPACE IV	A. B. S.	●	●	●	●	●	●	●	●	305 115 056 464 573 752 650 748 117 092 618 583 247 650 284 004
ESPACE IV PH2/3/4	Variable P. A. S.	●	●	●	●	○	●	●	○	127 247
ESPACE IV PH2/3/4	UCH	●	●	●	●	●	●	○	●	642 226 748 009 629 286 097 475 571 426 252 247 487 060 328 364 624 647 058 291 297 362 294 653 593 374 054 557 498 210 172 296 625 194 162 284 293 164
ESPACE IV PH2/3/4	Radio	※	※	※	※	※	※	○	※	751 748 247 603 096 175
ESPACE IV PH2/3/4	Parking prox can	●	●	●	●	○	●	○	●	752 107 748 247 268 255 609 649 083
ESPACE IV PH2/3/4	Parking brake	●	●	●	●	●	●	●	●	100 748 546 658 542 247 645
ESPACE IV PH2/3/4	Parking assistance	●	●	●	●	○	●	○	●	107 748 247 609 649 083
ESPACE IV PH2/3/4	Multimedia interface	※	※	※	※	※	※	○	※	748 208 247 653
ESPACE IV PH2/3/4	Multimed. connection	○	○	○	○	○	○	○	○	
ESPACE IV PH2/3/4	Lighting	●	●	●	●	●	●	○	●	597 660 247 171 363 194 569 059 196 653
ESPACE IV PH2/3/4	Instrument panel	●	●	●	●	●	●	○	●	409 635 748 748 247 084 212 455 101 406 171 433 150 284 364 626 617 421 175 278 627 352 435 006
ESPACE IV PH2/3/4	Injection	※	※	※	※	※	※	※	※	047 043 589 277 588 748 367 463 324 660 633 166 397 311 007 019 478 102 543 203 659 042 274 484 152 496 041 251 438 208 478 020 202 247 474 215 199 247 605 036
ESPACE IV PH2/3/4	Heater	●	●	●	●	●	●	○	○	247 231 232
ESPACE IV PH2/3/4	Communications unit	※	※	※	※	※	※	○	※	382 748 156 208 247 653
ESPACE IV PH2/3/4	Automatic gearbox	※	※	※	※	※	※	※	○	383 752 748 015 230 057 248
ESPACE IV PH2/3/4	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 752 632 366 319 137 502 247 566
ESPACE IV PH2/3/4	Air conditioning	●	●	●	●	●	●	○	●	748 247 612 300 194 512 039 034 177 048 125 281
ESPACE IV PH2/3/4	A. B. S.	●	●	●	●	●	●	●	●	305 115 056 464 573 752 650 748 117 092 618 583 247 284
ESPACE V	Variable P. A. S.	●	●	●	●	○	●	●	○	748 247
ESPACE V	UPC	●	●	●	●	●	●	○	○	577 302 143 129 528 302 395 161

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
ESPACE V	UCH	●	●	●	●	●	●	●	●	660 426 247 165 292 615 554 550 044 518 663 296 320 162
ESPACE V	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	247 131
ESPACE V	Right-hand door	●	●	●	●	●	●	○	○	748 247
ESPACE V	Radio	●	●	●	●	●	●	○	●	748 611 247 627 602 606 350 175 149
ESPACE V	Piloted suspension	●	●	●	●	○	●	●	○	748 247
ESPACE V	Parking prox can	●	●	●	●	●	●	○	●	748 247 565 506 256 609 083
ESPACE V	Parking brake	●	●	●	●	○	●	●	●	163 014 052 748 645 247
ESPACE V	POWER BACK DOOR	●	●	●	●	○	●	○	○	247 458
ESPACE V	Multimedia interface	●	●	●	○	●	○	○	○	748 208
ESPACE V	Left-hand door	●	●	●	●	●	●	○	○	371 513 265 748 247
ESPACE V	Instrument panel	●	●	●	●	●	●	○	●	748 247 129 419 142 175 627 006 351
ESPACE V	Injection	●	●	●	●	●	●	●	※	317 182 302 395 047 277 660 160 159 158 157 587 302 111 200 395 576 330 549 437 042 274 595 370 238 484 152 496 041 251 533 481 020 202 247 474 215 247
ESPACE V	HEAD UP DISPLAY	●	●	●	○	●	○	○	○	660 247
ESPACE V	Gearbox elec control	●	●	●	●	●	●	●	○	137 748 247
ESPACE V	FRONT CAMERA	●	●	●	●	○	●	○	○	748 247 127
ESPACE V	Driver's position	●	●	●	●	●	●	○	○	371 513 265 748 247
ESPACE V	Distance regulator	●	●	●	●	○	●	○	○	748 247
ESPACE V	Automatic gearbox	●	●	●	●	●	●	●	○	563 061 469 562 480 748 247
ESPACE V	Amplifier	●	●	●	●	●	●	○	○	748 049 247 386
ESPACE V	Airbag / pretensioners	●	●	●	●	●	●	○	●	748 632 366 247 566
ESPACE V	Air conditioning	●	●	●	●	●	●	○	○	281 130 247
ESPACE V	A. B. S.	●	●	●	●	●	●	●	●	368 619 573 584 748 522 369 092 618 583 585 247 616
ESPACE V	4 wheels steering	●	●	●	●	●	●	●	○	517 327 247
KADJAR	Variable P. A. S.	●	●	●	●	○	●	●	○	247
KADJAR	UPC	●	●	●	●	●	●	○	○	577 302 143 129 528 302 395 161
KADJAR	UCH	●	●	●	●	●	●	●	●	660 426 247 165 292 615 554 550 044 518 663 296 320 162
KADJAR	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	247 131
KADJAR	Radio	●	●	●	●	●	●	○	●	748 611 247 247 627 602 606 350 175 149
KADJAR	Parking prox can	●	●	●	●	●	●	○	●	748 247 565 506 256 609 083
KADJAR	Parking brake	●	●	●	●	○	●	●	●	163 014 052 748 645 247
KADJAR	Multimedia interface	●	●	●	○	○	○	○	○	748 247
KADJAR	Instrument panel	●	●	●	●	●	●	○	●	748 247 129 419 142 175 627 006 351

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
KANGOO II	Instrument panel	●	●	●	●	●	●	○	●	128 050 050 348 348 050 050 348 348 272 271 050 348 529 752 245 635 403 402 401 400 748 661 076 247 082 586 322 303 553 253 455 625 241 530 419 552 150 284 364 617 421 175 278 352 005 178 119 600 006 174 351
KANGOO II	Injection	※	※	※	※	※	※	※	※	367 660 633 160 159 158 157 397 311 099 572 227 543 203 659 436 478 474 462 199 247
KANGOO II	Communications unit	○	○	○	○	○	○	○	○	
KANGOO II	Automatic gearbox	○	○	○	○	○	○	○	○	
KANGOO II	Airbag / pretensioners	●	●	●	●	●	●	○	●	748 632 366 502 247 566 189 440 449 185 261 258 539 360 538 262 358 491 509 259
KANGOO II	Air conditioning	●	●	●	●	●	●	○	●	748 247 090 300 194 281
KANGOO II	Adaptation unit	●	●	●	●	○	●	●	○	247
KANGOO II	A. B. S.	●	●	●	●	●	●	※	○	234 056 464 573 752 650 748 089 117 247
KANGOO MUX	Injection	●	●	●	●	●	●	※	※	367 660 633 548 225 579 301 478 202 474 648 220 199 247 723 681 737 698 153 605 459 036 284 166 324 718 676 745 708
KANGOO MUX	Immobiliser	●	●	●	●	●	※	●	○	346 465
KANGOO MUX	GAS INJ.	●	●	●	●	●	●	※	※	
KANGOO MUX	Connection unit	●	●	●	●	●	●	●	●	320 608 162 065 557
KANGOO MUX	Automatic gearbox	●	●	●	●	●	●	●	※	396 145 057 248 361 037 221 387 040 558 116 617 753 751
KANGOO MUX	Airbag / pretensioners	●	●	●	●	※	●	●	●	567 319 137 502 751
KANGOO MUX	A. B. S.	●	●	●	●	●	※	●	※	089 752 573
KANGOO VLL	Variable P. A. S.	○	○	○	○	○	○	○	○	
KANGOO VLL	UCH	●	●	●	●	●	●	○	●	748 631 247 545
KANGOO VLL	Tracker	○	○	○	○	○	○	○	○	
KANGOO VLL	Injection	※	※	※	※	※	※	※	※	277 748 367 660 160 159 158 157 311 548 543 203 659 045 251 533 481 478 247 462 215 199 247
KANGOO VLL	Airbag / pretensioners	●	●	●	●	○	●	○	●	752 632 366 247
KANGOO VLL	A. B. S.	●	●	●	●	●	●	●	○	573 752 748 247
KANGOO ZE/StopStart/PH2	Variable P. A. S.	○	○	○	○	○	○	○	○	
KANGOO ZE/StopStart/PH2	UPC	※	※	※	※	※	※	○	※	431 430 428 427 086 087 088 085 147 148 394 393 392 391 528 748 103 103 390 395 161 046 591
KANGOO ZE/StopStart/PH2	UCH	※	※	※	※	※	※	○	※	098 592 247 607
KANGOO ZE/StopStart/PH2	Tyres	●	●	●	●	○	●	●	○	426 247
KANGOO ZE/StopStart/PH2	TELEMATIC CTRL UNIT	※	※	※	※	※	※	○	※	247 131
KANGOO ZE/StopStart/PH2	Radio	※	※	※	※	※	※	○	※	751 247 527 247 156 508 350 149

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
KANGOO ZE/StopStart/PH2	Parking prox can	●	●	●	●	●	●	○	●	247 083
KANGOO ZE/StopStart/PH2	Parking assistance	○	○	○	○	○	○	○	○	
KANGOO ZE/StopStart/PH2	PEB	※	※	※	※	○	※	※	○	543 340 247
KANGOO ZE/StopStart/PH2	Multimedia interface	●	●	●	●	●	●	○	○	247 304 606 601
KANGOO ZE/StopStart/PH2	Multimed. connection	○	○	○	○	○	○	○	○	
KANGOO ZE/StopStart/PH2	LBC2	●	●	●	※	○	※	※	○	575 247
KANGOO ZE/StopStart/PH2	LBC	※	※	※	※	○	※	※	○	379 574 543 613 614 247
KANGOO ZE/StopStart/PH2	Instrument panel	※	※	※	※	※	※	○	○	050 050 348 348 529 635 403 402 401 400 748 076 247 553 455 625 419 175 278 352 006
KANGOO ZE/StopStart/PH2	Injection	※	※	※	※	※	※	※	※	302 395 047 394 393 392 391 277 660 160 159 158 157 397 311 019 572 548 543 203 587 302 331 330 662 013 326 041 111 200 395 576 330 105 437 042 372 621 274 370 238 484 251 332 152 332 496 041 106 251 438 533 043 481 201 020 202 247 474 215 199 247
KANGOO ZE/StopStart/PH2	Heater	○	○	○	○	○	○	○	○	
KANGOO ZE/StopStart/PH2	EVC	※	※	※	※	※	※	※	※	543 195 246 247 152
KANGOO ZE/StopStart/PH2	Communications unit	※	※	※	※	※	※	○	※	247 208 350 627 175 149
KANGOO ZE/StopStart/PH2	CHARGE CONTROLER	●	●	●	●	○	●	○	○	247
KANGOO ZE/StopStart/PH2	BCB	※	※	※	○	○	○	○	○	247
KANGOO ZE/StopStart/PH2	Automatic gearbox	●	●	●	●	●	●	●	○	467 466 471 468 562 480 428 748 353 121 522 230 247 473
KANGOO ZE/StopStart/PH2	Airbag / pretensioners	○	○	○	○	○	○	○	○	
KANGOO ZE/StopStart/PH2	Air conditioning	●	●	●	●	●	●	○	●	130 247 090 300 194 281
KANGOO ZE/StopStart/PH2	Adaptation unit	○	○	○	○	○	○	○	○	
KANGOO ZE/StopStart/PH2	A. B. S.	※	※	※	※	※	※	※	※	303 012 234 056 464 573 752 650 117 522 092 618 583 247
KOLEOS/QM5	Variable P. A. S.	●	●	●	●	○	●	●	○	247
KOLEOS/QM5	UPC	●	●	●	●	●	●	○	○	247
KOLEOS/QM5	UCH	●	●	●	●	●	●	●	●	660 095 051 247 325 499 044 414 498 296 162 293
KOLEOS/QM5	Tyres	●	●	●	●	※	●	※	○	427 426 247 138
KOLEOS/QM5	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	247 131 128

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
KOLEOS/QM5	Radio	※	※	※	※	※	※	○	※	751 748 247 527 247 175 149 194 240 596
KOLEOS/QM5	Parking prox can	●	●	●	●	○	●	○	●	752 748 247 560 284 609 083
KOLEOS/QM5	Parking brake	●	●	●	●	●	●	●	●	505 504 081 100 748 542 564 247 645
KOLEOS/QM5	Multimedia interface	※	※	※	※	※	※	○	※	748 247
KOLEOS/QM5	Multimed. connection	○	○	○	○	○	○	○	○	
KOLEOS/QM5	Instrument panel	※	※	※	※	○	※	○	※	570 247 352
KOLEOS/QM5	Injection	※	※	※	※	※	※	※	※	112 308 313 312 589 277 748 324 306 307 208 017 018 228 648 247
KOLEOS/QM5	Discharge lamp	●	●	●	●	●	●	○	○	198 198 198 198 597 247
KOLEOS/QM5	Communications unit	※	※	※	※	※	※	○	※	748 752 492 247 208 247 350 149 653
KOLEOS/QM5	Automatic gearbox	●	●	●	●	○	●	○	○	526 247
KOLEOS/QM5	Auto front lighting	●	●	●	●	●	●	○	○	581 247
KOLEOS/QM5	Amplifier	○	○	○	○	○	○	○	○	
KOLEOS/QM5	Airbag / pretensioners	●	●	●	●	○	●	○	○	247
KOLEOS/QM5	ADIVI	●	●	●	●	●	●	○	○	247 138
KOLEOS/QM5	A. B. S.	●	●	●	●	●	●	○	○	247
KOLEOS/QM5	4 wheels drive	●	●	●	●	○	●	○	○	247
KWID	Variable P. A. S.	●	●	●	●	○	●	○	○	247
KWID	UCH	●	●	●	●	●	●	●	○	247
KWID	Radio	●	●	●	●	●	●	○	●	751 247 350 149
KWID	Instrument panel	●	●	●	●	●	●	※	●	635 247 129 216
KWID	Injection	●	●	●	●	●	●	●	○	373 277 311 548 543 636 251 533 481 247 215 199
KWID	Airbag / pretensioners	●	●	●	●	●	●	○	●	632 366 247
LAGUNA	Voice synthesiser	※	※	※	※	○	※	※	※	388
LAGUNA	Variable P. A. S.	●	●	●	●	●	●	●	○	752 754
LAGUNA	Instrument panel	※	※	※	※	○	※	※	※	217 174 351 388
LAGUNA	Injection	●	●	●	●	●	●	※	※	457 605 036 315 316 718 676 722 680
LAGUNA	Immobiliser	●	●	●	●	●	●	●	○	709 746 700 670 483 482 167 169
LAGUNA	Driver's position	●	●	●	●	●	●	●	○	751
LAGUNA	Automatic gearbox	●	●	●	●	●	●	●	○	38
LAGUNA	Airbag / pretensioners	●	●	●	●	※	●	●	○	124 632 366 752 695 735 733 719
LAGUNA	Air conditioning	●	●	●	●	○	●	●	○	
LAGUNA	A. B. S.	●	●	●	●	●	※	●	○	117 752
LAGUNA II	UCH	●	●	●	●	●	●	○	●	113 642 226 748 349 629 094 093 097 475 426 252 247 421 364 624 460 656 058 634 291 176 064 608 339 109 108 066 164 374 054 210 555 296 625 194 162 497 284 293

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
LAGUNA II	Parking assistance	●	●	●	●	○	●	○	●	748 247 609 649 083
LAGUNA II	Instrument panel	●	●	●	●	※	●	○	●	245 635 403 402 401 400 173 748 247 101 552 418 417 638 637 424 423 150 284 364 062 626 617 421 175 656 278 653 627 352 016 282 435 628 600 006 521
LAGUNA II	Injection	●	●	●	●	●	●	※	※	589 277 748 324 660 166 478 102 543 203 659 478 247 474 215 199 605 036
LAGUNA II	Heater	●	●	●	●	●	●	○	○	247 231 232
LAGUNA II	GAS INJ.	●	●	●	●	●	●	○	●	247
LAGUNA II	Discharge lamp	●	●	●	●	●	●	○	●	748 247 653 127
LAGUNA II	Automatic gearbox	●	●	●	●	●	●	※	※	753 387 752 748 015 396 145 057 247 248 387 040 558 116 617
LAGUNA II	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 752 632 366 567 319 137 502 247 566
LAGUNA II	Air conditioning	●	●	●	●	●	●	○	●	748 247 237 624 177 125 299 653
LAGUNA II	A. B. S.	●	●	●	●	●	●	●	●	573 752 748 117 247 650 284 004
LAGUNA III	Variable P. A. S.	●	●	●	●	○	●	●	○	127 247
LAGUNA III	UPC	※	※	※	※	※	※	○	※	086 087 088 085 147 148 394 393 392 391 129 528 748 103 103 390 395 161 247 591
LAGUNA III	UCH	※	※	※	※	※	※	※	※	642 660 490 095 426 247 338 339
LAGUNA III	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	○	247 131
LAGUNA III	Right-hand door	●	○	○	○	○	○	○	○	130
LAGUNA III	Radio	※	※	※	※	※	※	○	※	751 748 247 527 247 156 603 350 213 149 240 596
LAGUNA III	Passenger's door	●	●	●	●	●	●	○	○	748 244 247
LAGUNA III	Parking prox can	●	●	●	●	※	●	○	●	107 748 247 268 255 609 083
LAGUNA III	Parking brake	●	●	●	●	●	●	●	●	052 748 309 425 542 247
LAGUNA III	Multimedia interface	※	※	※	※	※	※	○	○	748 247 606 601
LAGUNA III	Multimed. connection	○	○	○	○	○	○	○	○	
LAGUNA III	Lighting	●	●	●	●	●	●	○	●	597 247
LAGUNA III	Left-hand door	●	○	○	○	○	○	○	○	130
LAGUNA III	Instrument panel	●	●	●	●	●	●	○	●	748 173 247 419 150 142 175 627 352 006
LAGUNA III	Injection	※	※	※	※	※	※	※	※	043 112 589 277 427 660 397 311 007 019 478 102 543 203 659 152 041 239 438 043 481 202 648 474 462 215 199 247
LAGUNA III	Driver's position	●	●	●	●	○	●	○	○	748 476 247
LAGUNA III	Driver's door	●	●	●	●	●	●	○	○	748 244 247
LAGUNA III	Communications unit	※	※	※	※	※	※	○	※	752 247 247 350 149
LAGUNA III	Automatic gearbox	※	※	※	※	※	※	※	※	748 230 248
LAGUNA III	Amplifier	○	○	○	○	○	○	○	○	
LAGUNA III	Airbag / pretensioners	●	●	●	●	○	●	○	●	440 748 632 366 502 247 566

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
LOGGY	A. B. S.	○	○	○	○	○	○	○	○	
LOGAN	Variable P. A. S.	※	※	※	※	○	※	※	※	127 751 748 247
LOGAN	UCH	※	※	※	※	※	※	○	※	748 631 247 250
LOGAN	Tracker	○	○	○	○	○	○	○	○	
LOGAN	Radio	※	※	※	※	※	※	○	※	751 247 527 350 149
LOGAN	Injection	※	※	※	※	※	※	※	※	748 367 660 160 159 158 157 203 610 331 314 478 247 462 199 247
LOGAN	GAS INJ.	●	●	●	●	●	●	○	●	748 247
LOGAN	Automatic gearbox	※	※	※	※	※	※	※	○	753 387 752 748 057 247
LOGAN	Airbag / pretensioners	※	※	※	※	○	※	○	※	748 632 366 502 247 566 451 187 189 450 186 440 267 266 321 449 185 551 552 439 263 260
LOGAN	A. B. S.	※	※	※	※	※	※	※	○	573 752 650 748 089 117 247
LOGAN II/SANDERO II	Variable P. A. S.	○	○	○	○	○	○	○	○	
LOGAN II/SANDERO II	UCH	※	※	※	※	※	※	※	※	426 395 302 247 520 554 044 557 296
LOGAN II/SANDERO II	Tracker	○	○	○	○	○	○	○	○	
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	247 131
LOGAN II/SANDERO II	Radio	※	※	※	※	※	※	○	※	751 247 247 350 149
LOGAN II/SANDERO II	Multimedia interface	●	●	●	●	●	●	○	○	247 304 606 601
LOGAN II/SANDERO II	Instrument panel	※	※	※	※	※	※	○	※	635 247 084 129 241 419 150 284 142 175 006
LOGAN II/SANDERO II	Injection	※	※	※	※	※	※	※	※	302 395 047 394 393 392 391 277 660 160 159 158 157 397 311 332 019 543 243 572 548 543 203 251 251 251 251 587 302 331 330 662 041 111 200 395 576 330 437 042 372 621 274 370 238 251 045 484 251 336 335 334 333 332 152 332 496 041 270 106 251 438 533 043 481 201 020 202 247 474 462 215 199 247 411 138 673
LOGAN II/SANDERO II	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	748 247 135 123 520 518 287 604 134 139 138 501 488 011 141 479 133
LOGAN II/SANDERO II	Automatic gearbox	※	※	※	※	※	※	※	○	525 524 523 247
LOGAN II/SANDERO II	Airbag / pretensioners	○	○	○	○	○	○	○	○	
LOGAN II/SANDERO II	Air conditioning	●	●	●	●	●	●	○	●	130 247
LOGAN II/SANDERO II	A. B. S.	※	※	※	※	※	※	※	※	012 573 752 584 748 522 369 092 618 583 247
MAST RWD PH2	Injection	●	●	●	●	●	●	○	●	225 008 220
MAST RWD PH2	Immobiliser	●	●	●	●	●	※	●	○	346 465

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
MAST RWD PH2	Connection unit	●	●	●	●	●	●	●	●	510 065 173
MAST RWD PH2	Airbag / pretensioners	●	●	●	●	○	●	●	●	319 137 502
MAST RWD PH2	Adaptation unit	●	●	●	●	○	○	○	○	
MAST RWD PH2	A. B. S.	●	●	●	●	●	●	※	○	573
MAST RWD PH3	UCH	●	●	●	●	●	●	○	●	748 346 310 465 247 162
MAST RWD PH3	Injection	●	●	●	●	●	●	●	●	589 277 660 478 543 203 659 474 247
MAST RWD PH3	Communications unit	●	●	●	●	●	●	○	●	124 748 247
MAST RWD PH3	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 752 632 366 319 137 502 247
MAST RWD PH3	Adaptation unit	●	●	●	●	○	●	●	○	247
MAST RWD PH3	A. B. S.	●	●	●	●	●	●	●	●	573 752 650 748 079 117 247
MASTER	Piloted suspension	●	●	●	●	○	●	●	○	751
MASTER	Injection	●	●	●	●	●	※	※	※	651 225 202 220 723 681 737 698 457 605 036 714 673 166 324 716 677 715 674 718 676 726 684 745 708 441
MASTER	Immobiliser	●	●	●	●	●	●	●	○	483 482 122 169
MASTER	Connection unit	●	●	●	●	●	○	●	○	540 413 700 670 709 746 055 494
MASTER	Airbag / pretensioners	●	●	●	●	※	●	●	※	124 632 366 752 719
MASTER	A. B. S.	●	●	●	●	●	○	●	○	
MASTER III	Variable P. A. S.	●	●	●	●	○	●	○	●	748 247 620
MASTER III	UREA DOSING CONTROL MODULE	●	●	●	●	●	●	●	○	748 026 021 023 028 025 032 029 027 031 543 024 247 022 030 033
MASTER III	UPC	※	※	※	※	※	※	○	※	431 430 428 427 086 087 088 085 147 148 394 393 392 391 528 748 103 103 390 395 161 046 591
MASTER III	UCH	※	※	※	※	※	※	○	※	660 098 345 592 247 607
MASTER III	Tyres	●	●	●	●	○	●	●	○	426 247
MASTER III	Tracker	○	○	○	○	○	○	○	○	
MASTER III	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	※	748 247 131
MASTER III	Smart keyless	○	○	○	○	○	○	○	○	
MASTER III	Radio	※	※	※	※	※	※	○	※	751 247 527 247 156 508 350 149
MASTER III	Parking assistance	○	○	○	○	○	○	○	○	
MASTER III	Multimedia interface	※	※	※	※	※	※	○	○	247 304 606 601
MASTER III	Multimed. connection	○	○	○	○	○	○	○	○	
MASTER III	Lighting	○	○	○	○	○	○	○	○	
MASTER III	Instrument panel	※	※	※	※	※	※	○	○	050 050 348 348 529 635 403 402 401 400 748 076 247 553 455 625 419 175 278 352 006

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
MASTER III	Injection	※	※	※	※	※	※	※	※	302 395 394 393 392 391 277 660 160 159 158 157 397 311 019 243 572 102 543 203 587 289 041 111 200 395 330 549 437 042 372 621 274 595 484 152 496 041 239 251 438 072 043 020 202 247 462 215 199 247
MASTER III	FRONT CAMERA	●	●	●	●	○	●	○	○	208 247
MASTER III	Communications unit	※	※	※	※	※	※	○	※	247 208 350 627 175 149
MASTER III	Automatic gearbox	○	○	○	○	○	○	○	○	
MASTER III	Airbag / pretensioners	○	○	○	○	○	○	○	○	
MASTER III	Air conditioning	○	○	○	○	○	○	○	○	
MASTER III	Adaptation unit	※	※	※	○	○	○	○	○	247
MASTER III	A. B. S.	※	※	※	※	※	※	※	※	012 573 752 584 748 089 117 522 092 618 583 247 616
MASTER PH2	Piloted suspension	●	●	●	●	○	●	●	○	751
MASTER PH2	Parking prox can	●	●	●	●	○	○	○	●	609 649 083
MASTER PH2	Parking assistance	●	●	●	●	○	○	○	●	609 649 083
MASTER PH2	Injection	●	●	●	●	●	●	○	●	651 225 008 202 220 036 166 324 441
MASTER PH2	Immobiliser	●	●	●	●	●	※	●	○	346 465
MASTER PH2	Connection unit	●	●	●	●	●	●	●	●	065 151
MASTER PH2	Automatic gearbox	●	●	●	●	●	●	●	○	120 473 474 248
MASTER PH2	Airbag / pretensioners	●	●	●	●	○	●	●	●	319 137 502
MASTER PH2	Adaptation unit	●	●	●	●	○	○	○	○	
MASTER PH2	A. B. S.	●	●	●	●	●	●	○	○	
MASTER PH3	UCH	●	●	●	●	●	●	○	●	748 660 346 310 465 247 162
MASTER PH3	Tracker	○	○	○	○	○	○	○	○	
MASTER PH3	Piloted suspension	●	●	●	●	●	●	○	○	472 247
MASTER PH3	Parking assistance	●	●	●	●	○	●	○	●	748 247 609 649 083
MASTER PH3	Injection	※	※	※	※	※	※	※	※	643 644 589 277 660 397 311 099 572 478 102 543 203 659 208 201 247 474 215 247 091 605 036 166 324
MASTER PH3	Communications unit	●	●	●	●	●	●	○	●	124 748 247
MASTER PH3	Automatic gearbox	●	●	●	●	●	●	○	○	470 749 750 752 480 748 120 473 474 248
MASTER PH3	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 752 632 366 319 137 502 247
MASTER PH3	Adaptation unit	●	●	●	●	○	●	●	○	247
MASTER PH3	A. B. S.	●	●	●	●	●	●	※	※	650 573 752 584 079 247
MASTER RWD	Injection	●	●	●	●	○	○	○	○	
MASTER RWD	Immobiliser	●	●	●	●	●	●	●	○	483 482 122 169
MASTER RWD	Connection unit	●	●	●	●	●	○	●	○	540 413 700 670 709 746 055 494

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
MASTER RWD	Airbag / pretensioners	●	●	●	●	●	●	●	●	751
MEGANE II	Variable P.A.S.	●	●	●	●	○	●	●	●	751 585 748 127 247 485 486
MEGANE II	UPC	●	●	●	●	●	●	○	●	650 748 247 048
MEGANE II	UCH	●	●	●	●	●	●	○	●	384 226 748 118 631 095 426 489 247 503 511 630 118 555 242 222 296 257 194 065 284 164
MEGANE II	Tracker	○	○	○	○	○	○	○	○	
MEGANE II	Sunroof control unit	●	●	●	●	●	●	●	●	660 247 541
MEGANE II	Right coslad	●	●	●	●	●	●	○	●	748 247 126 653 127
MEGANE II	Parking assistance	●	●	●	●	○	●	○	●	107 748 247 609 649 083
MEGANE II	Lighting	●	●	●	●	●	●	○	●	597 748 247 569 059 196 653
MEGANE II	Left coslad	●	●	●	●	●	●	○	●	748 247 126 653 127
MEGANE II	Instrument panel	●	●	●	●	●	●	○	●	245 635 403 402 401 400 748 247 455 552 150 284 364 626 142 617 421 175 278 653 435 532 119 110 600 090 521 652 351
MEGANE II	Injection	※	※	※	※	※	※	※	※	589 277 588 367 324 660 633 166 160 159 158 157 311 099 572 478 102 227 548 547 543 203 659 208 436 478 247 474 462 199 247 605
MEGANE II	GAS INJ.	●	●	●	●	●	●	○	●	748 247
MEGANE II	Discharge lamp	●	●	●	●	○	●	○	●	748 247 126
MEGANE II	Communications unit	●	●	●	●	●	●	○	●	124 748 247
MEGANE II	Automatic gearbox	●	●	●	●	●	●	※	○	753 387 752 748 145 057 247
MEGANE II	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 752 632 366 137 502 247 343 342 344 341 280 279 073 074 075 446 183 193 447 566 190 254 184 448 507 445 453 189 440 442 180 179 443 515 514 267 266 155 154 653 452 188
MEGANE II	Air conditioning	●	●	●	●	○	●	○	●	748 247 300 653
MEGANE II	A.B.S.	●	●	●	●	●	●	●	○	640 234 056 464 573 752 650 748 089 117 207 247
MEGANE III/SCENIC III	Variable P.A.S.	○	○	○	○	○	○	○	○	
MEGANE III/SCENIC III	UPC	※	※	※	※	※	※	○	○	086 087 088 085 147 148 394 393 392 391 528 748 103 103 390 395 161 591
MEGANE III/SCENIC III	UCH	●	●	●	●	●	●	●	●	432 660 639 095 426 247 582 136
MEGANE III/SCENIC III	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	※	748 247 131
MEGANE III/SCENIC III	Sunroof control unit	○	○	○	○	○	○	○	○	
MEGANE III/SCENIC III	Radio	※	※	※	※	※	※	○	※	751 247 527 350 149
MEGANE III/SCENIC III	Passenger's door	○	○	○	○	○	○	○	○	
MEGANE III/SCENIC III	Parking prox can	●	●	●	●	※	●	○	●	107 748 247 268 255 609 083

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
MEGANE III/SCENIC III	Parking brake	○	○	○	○	○	○	○	○	
MEGANE III/SCENIC III	Multimedia interface	○	○	○	○	○	○	○	○	
MEGANE III/SCENIC III	Multimed. connection	○	○	○	○	○	○	○	○	
MEGANE III/SCENIC III	Lighting	○	○	○	○	○	○	○	○	
MEGANE III/SCENIC III	Instrument panel	※	※	※	※	※	※	○	※	247 419 150 284 142 175 627 352 006
MEGANE III/SCENIC III	Injection	※	※	※	※	※	※	※	※	302 395 047 394 393 392 391 589 277 660 160 159 158 157 397 311 332 007 019 543 203 572 478 102 548 543 203 659 251 251 251 251 587 302 330 662 013 326 111 200 395 576 330 105 549 437 042 274 595 370 238 251 045 484 251 336 335 334 333 152 332 496 041 239 270 106 251 438 533 043 481 020 202 648 247 474 462 215 199 247
MEGANE III/SCENIC III	FRONT CAMERA	●	●	●	●	○	●	○	○	208 247 127
MEGANE III/SCENIC III	Driver's position	●	●	●	●	○	●	○	○	476 247
MEGANE III/SCENIC III	Driver's door	○	○	○	○	○	○	○	○	
MEGANE III/SCENIC III	Communications unit	※	※	※	※	※	※	○	※	752 247 350 149
MEGANE III/SCENIC III	Automatic gearbox	※	※	※	※	※	※	※	○	467 466 471 468 562 480 428 748 353 121 522 230 247 473
MEGANE III/SCENIC III	Airbag / pretensioners	○	○	○	○	○	○	○	○	
MEGANE III/SCENIC III	Air conditioning	●	●	●	●	●	●	○	●	130 748 247
MEGANE III/SCENIC III	A. B. S.	※	※	※	※	※	※	※	※	573 752 748 369 092 618 583 247
MEGANE IV	Variable P. A. S.	●	●	●	●	○	●	●	○	748 247
MEGANE IV	UPC	●	●	●	●	●	●	○	○	577 302 143 129 528 302 395 161
MEGANE IV	UCH	●	●	●	●	●	●	●	●	660 426 247 165 292 615 554 550 044 518 663 296 320 162
MEGANE IV	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	247 131
MEGANE IV	Supervisor	●	●	●	●	●	●	●	○	247
MEGANE IV	Radio	●	●	●	●	●	●	○	●	748 611 131 247 627 602 606 350 175 149
MEGANE IV	Parking prox can	●	●	●	●	●	●	○	●	748 247 565 506 256 609 083
MEGANE IV	Parking brake	●	●	●	●	○	●	●	●	163 014 052 748 645 247
MEGANE IV	PEB	●	●	●	●	○	●	○	○	247
MEGANE IV	Multimedia interface	●	●	●	※	●	※	○	○	748 247 131 208
MEGANE IV	Left-hand door	●	●	●	●	●	●	○	○	371 513 265 748 247

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
MEGANE IV	LBC2	●	●	●	○	○	○	○	○	575 247
MEGANE IV	LBC	●	●	●	●	●	●	○	○	574 247
MEGANE IV	Instrument panel	●	●	●	●	●	●	○	●	748 247 129 419 142 175 627 006 351
MEGANE IV	Injection	●	●	●	●	●	●	●	※	317 182 302 395 047 394 393 392 391 277 660 160 159 158 157 397 311 572 548 543 203 636 587 302 330 662 013 326 111 200 395 576 330 105 549 437 042 621 274 595 370 238 484 251 152 332 496 041 106 251 438 533 481 020 202 247 474 215 199 247
MEGANE IV	HEAD UP DISPLAY	●	●	●	○	●	○	○	○	660 247
MEGANE IV	FRONT CAMERA	●	●	●	●	○	●	○	○	748 247 127
MEGANE IV	Driver's position	●	●	●	●	●	●	○	○	371 513 265 748 247
MEGANE IV	Distance regulator	●	●	●	●	○	●	○	○	748 247
MEGANE IV	Automatic gearbox	●	●	●	●	●	●	※	○	563 061 285 467 466 471 468 469 562 749 752 480 748 121 230 247 473
MEGANE IV	Amplifier	●	●	●	●	●	●	○	○	748 049 247 386
MEGANE IV	Airbag / pretensioners	●	●	●	●	●	●	○	●	748 632 366 247 566
MEGANE IV	Air conditioning	●	●	●	●	●	●	○	○	281 130 247
MEGANE IV	A. B. S.	●	●	●	●	●	●	●	●	368 619 573 584 748 522 369 092 618 583 585 247 616
MEGANE IV	4 wheels steering	●	●	●	●	●	●	●	○	517 327 247
MEGANE/SCEN.	Tyres	●	●	●	●	●	○	●	●	475 252 653
MEGANE/SCEN.	Injection	●	●	●	●	●	※	※	※	225 229 478 202 648 220 723 681 737 698 457 605 459 036 284 166 324 590 461 718 676 745 708 736 697 745 708 718 676 722 680
MEGANE/SCEN.	Immobiliser	●	●	●	●	●	○	●	●	720 678 219 218 169 122 623 622 010 214
MEGANE/SCEN.	Hood control	●	●	●	●	●	●	○	○	
MEGANE/SCEN.	GAS INJ.	●	●	●	●	●	●	●	○	
MEGANE/SCEN.	Driver's position	●	●	●	●	●	●	●	○	751
MEGANE/SCEN.	Connection unit	●	●	●	●	●	○	●	●	
MEGANE/SCEN.	Automatic gearbox	●	●	●	●	●	●	●	※	396 145 057 361 037 221 387 040 558 116 617 671 712 718 038 398 753 751 751
MEGANE/SCEN.	Airbag / pretensioners	●	●	●	●	※	●	●	※	567 319 137 502 124 632 366 752 695 735 733 719
MEGANE/SCEN.	Air conditioning	●	●	●	●	●	●	●	※	752 692 132 140 209 568 288 077 704 687 696 740 702 727 685 359 537 725 683 731 690
MEGANE/SCEN.	A. B. S.	●	●	●	●	●	●	●	○	752 573
MODUS	Variable P. A. S.	※	※	※	※	○	※	※	※	127 751 585 748 247
MODUS	UPC	●	●	●	●	●	●	○	●	650 748 247
MODUS	UCH	●	●	●	●	●	●	○	●	384 748 098 247 631 297 599 002 118 557 663 296 194 164
MODUS	Tyres	●	●	●	●	○	●	○	●	556 226 748 426 475 247 653
MODUS	Parking assistance	●	●	●	●	○	●	○	●	107 748 247 609 649 083

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
NEW SM3/FLUENCE/MEGANE	Injection	※	※	※	※	※	※	※	※	302 395 047 394 393 392 391 277 660 397 311 332 007 019 543 203 572 102 548 543 203 659 251 251 251 251 587 302 330 662 111 395 330 437 042 274 370 238 251 045 484 251 336 335 334 333 152 332 496 041 239 270 106 251 438 533 043 481 020 202 247 462 215 199 247 138
NEW SM3/FLUENCE/MEGANE	EVC	○	○	○	○	○	○	○	○	
NEW SM3/FLUENCE/MEGANE	Driver's door	○	○	○	○	○	○	○	○	
NEW SM3/FLUENCE/MEGANE	Communications unit	※	※	※	※	※	※	○	※	752 247 350 149
NEW SM3/FLUENCE/MEGANE	BCB	※	※	※	※	○	※	※	※	543 247 114 337 080
NEW SM3/FLUENCE/MEGANE	Automatic gearbox	※	※	※	※	※	※	※	○	285 467 466 471 468 562 752 480 428 748 353 121 522 230 247 473
NEW SM3/FLUENCE/MEGANE	Amplifier	○	○	○	○	○	○	○	○	
NEW SM3/FLUENCE/MEGANE	Airbag / pretensioners	○	○	○	○	○	○	○	○	
NEW SM3/FLUENCE/MEGANE	Air conditioning	○	○	○	○	○	○	○	○	
NEW SM3/FLUENCE/MEGANE	A. B. S.	○	○	○	○	○	○	○	○	
SANDERO	Variable P. A. S.	※	※	※	※	○	※	※	※	127 751 748 247
SANDERO	UCH	※	※	※	※	※	※	○	※	748 631 247 250
SANDERO	Tracker	○	○	○	○	○	○	○	○	
SANDERO	Radio	※	※	※	※	※	※	○	※	751 247 527 350 149
SANDERO	Injection	※	※	※	※	※	※	※	※	748 367 660 160 159 158 157 203 610 331 314 478 247 462 199 247
SANDERO	GAS INJ.	●	●	●	●	●	●	○	●	748 247
SANDERO	Automatic gearbox	※	※	※	※	※	※	※	○	753 387 752 748 057 247
SANDERO	Airbag / pretensioners	※	※	※	※	○	※	○	※	748 632 366 502 247 566 451 187 189 450 186 440 267 266 321 449 185 551 552 439 263 260
SANDERO	A. B. S.	※	※	※	※	※	※	※	○	573 752 650 748 089 117 247
SCENIC II	Variable P. A. S.	●	●	●	●	○	●	●	※	751 585 748 127 247 485 486
SCENIC II	UPC	●	●	●	●	●	●	○	●	650 748 247 048
SCENIC II	UCH	●	●	●	●	●	●	○	●	384 226 748 118 095 426 489 247 503 511 630 118 555 242 222 296 257 194 065 284 164
SCENIC II	Radio	●	※	※	※	※	※	○	※	751 748 247 603 096 175
SCENIC II	Parking prox can	●	●	●	●	○	●	○	●	752 107 748 247 268 255 609 649 083
SCENIC II	Parking brake	●	●	●	●	●	●	※	●	100 748 546 658 542 247 645
SCENIC II	Parking assistance	●	●	●	●	○	●	○	●	107 748 247 609 649 083
SCENIC II	Multimedia interface	※	※	※	※	※	※	○	※	748 208 247 653

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
SCENIC II	Instrument panel	●	●	●	●	※	●	○	●	635 403 402 401 400 748 247 455 150 284 062 626 142 617 421 175 278 653 435 351
SCENIC II	Injection	※	※	※	※	※	※	※	※	589 277 588 367 324 660 633 166 160 159 158 157 311 099 572 478 102 227 548 547 543 203 659 208 436 478 247 474 462 199 247 605
SCENIC II	GAS INJ.	●	●	●	●	●	●	○	●	748 247
SCENIC II	Discharge lamp	●	●	●	●	●	●	○	●	748 247 653 127
SCENIC II	Communications unit	●	●	●	●	●	●	○	●	124 382 748 156 208 247 653
SCENIC II	Automatic gearbox	●	●	●	●	●	●	※	○	753 387 752 748 230 145 057 247 248
SCENIC II	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 752 632 366 137 502 247 343 342 344 341 280 279 073 074 075 446 183 193 447 566 190 254 184 448 507 445 453 189 440 442 180 179 443 515 514 267 266 155 154 653
SCENIC II	Air conditioning	●	●	●	●	○	●	○	●	748 247 300 653
SCENIC II	A. B. S.	●	●	●	●	●	●	●	○	640 234 056 464 573 752 650 748 089 117 207 247
SM7 - L47	UPC	○	○	○	○	○	○	○	○	
SM7 - L47	UCH	○	○	○	○	○	○	○	○	
SM7 - L47	Right-hand door	○	○	○	○	○	○	○	○	
SM7 - L47	Radio	※	※	※	※	※	※	○	※	751 247 527 350 149
SM7 - L47	Passenger's door	○	○	○	○	○	○	○	○	
SM7 - L47	Parking prox can	●	●	●	●	○	●	○	●	107 748 247 268 255 609 083
SM7 - L47	Parking brake	○	○	○	○	○	○	○	○	
SM7 - L47	Multimedia interface	○	○	○	○	○	○	○	○	
SM7 - L47	Multimed. connection	○	○	○	○	○	○	○	○	
SM7 - L47	Lighting	○	○	○	○	○	○	○	○	
SM7 - L47	Left-hand door	○	○	○	○	○	○	○	○	
SM7 - L47	Instrument panel	○	○	○	○	○	○	○	○	
SM7 - L47	Injection	○	○	○	○	○	○	○	○	
SM7 - L47	Driver's position	○	○	○	○	○	○	○	○	
SM7 - L47	Driver's door	○	○	○	○	○	○	○	○	
SM7 - L47	Communications unit	※	※	※	○	※	○	○	※	752 247
SM7 - L47	Automatic gearbox	※	※	※	※	※	※	※	○	467 466 471 468 562 480 428 748 353 121 522 230 247 473
SM7 - L47	Amplifier	○	○	○	○	○	○	○	○	
SM7 - L47	Airbag / pretensioners	○	○	○	○	○	○	○	○	
SM7 - L47	Air conditioning	○	○	○	○	○	○	○	○	
SM7 - L47	ADIVI	●	●	●	●	○	●	○	○	748 247
SM7 - L47	A. B. S.	○	○	○	○	○	○	○	○	
TALISMAN	Variable P. A. S.	●	●	●	●	○	●	●	○	748 247
TALISMAN	UPC	●	●	●	●	●	●	○	○	577 302 143 129 528 302 395 161

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
TALISMAN	UCH	●	●	●	●	●	●	●	●	660 426 247 165 292 615 554 550 044 518 663 296 320 162
TALISMAN	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	247 131
TALISMAN	Radio	●	●	●	●	●	●	○	●	748 611 131 247 627 602 606 350 175 149
TALISMAN	Piloted suspension	●	●	●	●	○	●	●	○	748 247
TALISMAN	Parking prox can	●	●	●	●	●	●	○	●	748 247 565 506 256 609 083
TALISMAN	Parking brake	●	●	●	●	○	●	●	●	163 014 052 748 645 247
TALISMAN	POWER BACK DOOR	●	●	●	●	○	●	○	○	247 458
TALISMAN	Multimedia interface	●	●	●	※	●	※	○	○	748 247 131 208
TALISMAN	Left-hand door	●	●	●	●	●	●	○	○	371 513 265 748 247
TALISMAN	Instrument panel	●	●	●	●	●	●	○	●	748 247 129 419 142 175 627 006 351
TALISMAN	Injection	●	●	●	●	●	●	●	※	317 182 302 395 047 394 393 392 391 277 660 160 159 158 157 397 311 572 543 203 636 587 302 330 111 200 395 576 330 549 437 042 621 274 595 370 238 484 152 496 041 251 533 481 020 202 247 474 215 199 247
TALISMAN	HEAD UP DISPLAY	●	●	●	○	●	○	○	○	660 247
TALISMAN	FRONT CAMERA	●	●	●	●	○	●	○	○	748 247 127
TALISMAN	Driver's position	●	●	●	●	●	●	○	○	371 513 265 748 247
TALISMAN	Distance regulator	●	●	●	●	○	●	○	○	748 247
TALISMAN	Automatic gearbox	●	●	●	●	※	●	※	○	563 061 285 467 466 471 468 469 562 749 752 480 748 121 230 247 473
TALISMAN	Amplifier	●	●	●	●	●	●	○	○	748 049 247 386
TALISMAN	Airbag / pretensioners	●	●	●	●	●	●	○	●	748 632 366 247 566
TALISMAN	Air conditioning	●	●	●	●	●	●	○	○	281 130 247
TALISMAN	A. B. S.	●	●	●	●	●	●	●	●	368 619 573 584 748 522 369 092 618 583 585 247 616
TALISMAN	4 wheels steering	●	●	●	●	●	●	●	○	517 327 247
THALIA/SYMB. 2	Variable P. A. S.	○	○	○	○	○	○	○	○	
THALIA/SYMB. 2	UCH	○	○	○	○	○	○	○	○	
THALIA/SYMB. 2	Tracker	○	○	○	○	○	○	○	○	
THALIA/SYMB. 2	Injection	※	※	※	※	※	※	※	※	329 748 367 463 660 160 159 158 157 203 659 610 331 314 478 648 220 247 462 199 247 389 459 036 284
THALIA/SYMB. 2	Automatic gearbox	○	○	○	○	○	○	○	○	
THALIA/SYMB. 2	Airbag / pretensioners	○	○	○	○	○	○	○	○	
THALIA/SYMB. 2	Air conditioning	○	○	○	○	○	○	○	○	
THALIA/SYMB. 2	A. B. S.	○	○	○	○	○	○	○	○	
THALIA/SYMBL	Injection	●	●	●	●	●	●	※	※	367 660 633 548 579 301 478 474 648 220 199 247 153 605 459 036 284

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
THALIA/SYMBL	Immobiliser	●	●	●	●	●	※	●	○	346 465 483 482 122 169 713 672
THALIA/SYMBL	Connection unit	●	●	●	●	●	※	●	※	320 495 065 689 730 540 413 721 679 703 741 700 670 693 732 709 746 710 747 250 055 494
THALIA/SYMBL	Automatic gearbox	●	●	●	●	●	●	●	※	396 145 057 361 037 221 387 040 558 116 617 671 712 718 676 398 753 751 751
THALIA/SYMBL	Airbag / pretensioners	●	●	●	●	※	●	●	※	502 566 450 186 440 321 449 185 734 694 751 439
THALIA/SYMBL	Air conditioning	●	●	●	●	●	●	●	○	752 692 132 140 209 568 288 077 704 687 696 740 702 727 685 725 683 731 690
THALIA/SYMBL	A. B. S.	●	●	●	●	●	※	●	※	089 752 573
TRAFIC II	Injection	●	●	●	●	●	●	※	●	225 008 478 202 220 723 681 737 698 036 166 324 718 676 745 708
TRAFIC II	Immobiliser	●	●	●	●	●	※	●	○	346 465
TRAFIC II	Heater	●	●	●	●	●	●	○	○	
TRAFIC II	Connection unit	●	●	●	●	●	●	●	●	65
TRAFIC II	Automatic gearbox	●	●	●	●	●	●	●	○	120 473 474 248
TRAFIC II	Airbag / pretensioners	●	●	●	●	○	●	●	●	318 567 319 137 502 566
TRAFIC II	Adaptation unit	●	●	●	●	○	○	○	○	
TRAFIC II	A. B. S.	●	●	●	●	※	※	※	※	
TRAFIC II P2/3	UCH	●	●	●	●	●	●	○	●	380 748 660 346 310 465 571 247 298 510 421 064 557 162 164
TRAFIC II P2/3	Radio	※	※	※	※	※	※	○	※	751 247
TRAFIC II P2/3	Parking assistance	●	●	●	●	○	●	○	●	748 247 609 649 083
TRAFIC II P2/3	Multimedia interface	○	○	○	○	○	○	○	○	
TRAFIC II P2/3	Multimed. connection	○	○	○	○	○	○	○	○	
TRAFIC II P2/3	Instrument panel	○	○	○	○	○	○	○	○	
TRAFIC II P2/3	Injection	※	※	※	※	※	※	※	※	589 277 367 324 660 633 166 397 311 099 572 478 102 543 203 659 208 247 474 215 199 247 605 036 673
TRAFIC II P2/3	Heater	●	●	●	●	●	●	○	○	247 231 232
TRAFIC II P2/3	Communications unit	※	※	※	※	※	※	○	※	124 748 247
TRAFIC II P2/3	Automatic gearbox	※	※	※	※	※	※	○	○	470 749 750 752 480 748 120 473 474 248
TRAFIC II P2/3	Airbag / pretensioners	※	※	※	※	○	※	○	※	748 752 632 366 318 319 137 502 247 566
TRAFIC II P2/3	Air conditioning	○	○	○	○	○	○	○	○	
TRAFIC II P2/3	Adaptation unit	●	●	●	●	○	●	●	○	247
TRAFIC II P2/3	A. B. S.	※	※	※	※	※	※	※	※	650 573 752 584 079 247
TRAFIC III	Variable P. A. S.	●	●	●	●	○	●	○	●	748 247 620
TRAFIC III	UREA DOSING CONTROL MODULE	●	●	●	●	●	●	●	○	748 026 021 023 028 025 032 029 027 031 543 024 247 022 030 033
TRAFIC III	UPC	●	●	●	●	●	●	○	●	129 528 748 650 395 161 046

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
TRAFIC III	UCH	●	●	●	●	●	●	●	●	426 247 365 554 296 164
TRAFIC III	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	247 131
TRAFIC III	Radio	●	●	●	●	●	●	○	●	751 247 527 247 156 350 149
TRAFIC III	Parking prox can	●	●	●	●	●	●	○	●	247 083
TRAFIC III	Multimedia interface	●	●	●	●	●	●	○	○	247 304 606 601
TRAFIC III	Instrument panel	●	●	●	●	●	●	○	●	635 247 129 142 175 352 006
TRAFIC III	Injection	●	●	●	●	●	●	●	●	302 395 047 394 393 392 391 277 660 160 159 158 157 397 311 572 543 203 587 302 111 200 395 576 330 549 437 042 621 274 595 370 238 484 332 152 496 041 251 020 202 247 474 215
TRAFIC III	Heater	●	●	●	●	○	●	○	○	247 231 232
TRAFIC III	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	095 247 518
TRAFIC III	Communications unit	●	●	●	●	●	●	○	●	247 208 350 627 175 149
TRAFIC III	Airbag / pretensioners	●	●	●	●	●	●	○	●	632 366 247
TRAFIC III	Air conditioning	●	●	●	●	●	●	○	○	281 130 247 281
TRAFIC III	Adaptation unit	●	●	●	○	○	○	○	○	247
TRAFIC III	A. B. S.	●	●	●	●	●	●	●	●	303 368 619 573 584 748 522 369 092 618 583 585 247 616
TWINGO II	Variable P. A. S.	※	※	※	※	○	※	○	※	247 377
TWINGO II	UCH	●	●	●	●	●	●	○	●	748 247 044 347 067 063 415 664 412 601 064 498 555 104 242 222 296 257 039 164
TWINGO II	Rev counter/symbol	※	※	※	※	※	※	○	※	748 531 617 422
TWINGO II	Radio	※	※	※	※	※	※	○	※	751 247 527 156 596
TWINGO II	Parking assistance	●	●	●	●	○	●	○	●	748 247 609 649 083
TWINGO II	Multimedia interface	○	○	○	○	○	○	○	○	
TWINGO II	Multimed. connection	○	○	○	○	○	○	○	○	
TWINGO II	Instrument panel	※	※	※	※	※	※	○	※	273 409 748 247 455 211 241 552 150 284 617 421 175 278 532
TWINGO II	Injection	※	※	※	※	※	※	※	※	277 367 660 633 160 159 158 157 311 099 572 548 543 203 659 152 106 251 533 481 474 462 215 199 247
TWINGO II	Automatic gearbox	●	●	●	●	●	●	●	○	749 750 752 480 748 120 473 474 248
TWINGO II	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 632 366 502 247 566 451 187 445 453 189 450 186 440 267 266 155 154 449 185
TWINGO II	Air conditioning	●	●	●	●	●	●	○	●	748 247 300 653 281
TWINGO II	A. B. S.	●	●	●	●	●	●	●	※	056 464 573 752 650 584 748 089 117 559 247 284
TWINGO III	Variable P. A. S.	●	●	●	●	●	●	●	○	247
TWINGO III	UPC	●	●	●	●	●	●	○	●	129 528 395 161 046
TWINGO III	UCH	●	●	●	●	●	●	●	●	426 247 554 044 557 296 164
TWINGO III	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	247 131

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
TWINGO III	Radio	●	●	●	●	●	●	○	●	247 527 247 156 350 149
TWINGO III	Multimedia interface	●	●	●	●	●	●	○	○	247 304 606 601
TWINGO III	Instrument panel	●	●	●	●	●	●	○	●	247 129 142 175 352 006
TWINGO III	Injection	●	●	●	●	●	●	●	●	641 277 311 543 636 621 152 251 533 481 215 247
TWINGO III	Gearbox elec control	●	●	●	○	○	○	○	○	247
TWINGO III	FRONT CAMERA	●	●	●	●	○	●	○	○	208 247
TWINGO III	Distance regulator	●	●	●	●	○	●	○	○	748 247
TWINGO III	Communications unit	●	●	●	●	●	●	○	●	247 208 350 627 175 149
TWINGO III	Automatic gearbox	●	●	●	●	●	●	○	●	467 466 471 469 562 480 230 247 473 283
TWINGO III	Airbag / pretensioners	●	●	●	●	●	●	○	●	632 366 247
TWINGO III	Air conditioning	●	●	●	●	●	●	○	○	281 130 247
TWINGO III	A. B. S.	●	●	●	●	●	●	●	●	516 269 012 584 522 092 618 583 247
TWINGO PHASE 2	Injection	●	●	●	●	●	※	※	●	367 660 633 548 478 375 474 247 691 166 324 736 697 722 680
TWINGO PHASE 2	Immobiliser	●	●	●	●	●	※	●	○	346 465 483 482 122 169 713 672
TWINGO PHASE 2	GAS INJ.	●	●	●	●	●	●	●	※	
TWINGO PHASE 2	Connection unit	●	●	●	●	●	※	●	※	065 540 413 700 670 709 746 250 598 055 494
TWINGO PHASE 2	Automatic gearbox	●	●	●	●	●	●	●	※	120 473 474 248 284
TWINGO PHASE 2	Airbag / pretensioners	●	●	●	●	※	●	●	※	567 319 137 502 124 632 366 752 695 735 733 719
TWINGO PHASE 2	A. B. S.	●	●	●	●	●	※	●	※	089 752
TWIZY	UCH	○	○	○	○	○	○	○	○	
TWIZY	LBC	●	●	●	●	○	●	○	○	578
TWIZY	Instrument panel	○	○	○	○	○	○	○	○	
TWIZY	BCB	●	●	●	●	○	○	○	○	
TWIZY	Airbag / pretensioners	○	○	○	○	○	○	○	○	
TWIZY	Adaptation unit	●	●	●	●	○	●	○	○	751 748 247
VEL SATIS	UCH	●	●	●	●	●	●	○	●	748 349 629 094 093 097 247 421 364 624 460 656 420 058 634 291 176 064 608 339 109 108 066 164 374 054 210 555 296 625 194 162 497 284 293
VEL SATIS	Tyres	●	●	●	●	●	●	○	●	556 113 226 426 475 247 653
VEL SATIS	Parking brake	●	●	●	●	●	●	○	●	100 748 546 658 542 247 645
VEL SATIS	Parking assistance	●	●	●	●	○	●	○	●	748 247 609 649 083
VEL SATIS	Instrument panel	●	●	●	●	●	●	○	●	245 635 403 402 401 400 173 748 247 101 552 418 417 638 637 424 423 150 284 364 062 626 617 421 175 656 278 653 627 223 352 434 407 410 408 016 435 628 600 006 521
VEL SATIS	Injection	●	●	●	●	●	●	※	※	043 589 277 748 367 324 660 633 166 478 102 543 203 659 478 247 474 215 199 605 036

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
VEL SATIS	Heater	●	●	●	●	●	●	○	○	247 231 232
VEL SATIS	Hands-free kit	●	●	●	●	●	●	○	●	100 053 561 376 748 752 247 350
VEL SATIS	Distance regulator	●	●	●	●	○	●	●	●	748 580 233 247 756 755 752
VEL SATIS	Discharge lamp	●	●	●	●	●	●	○	●	748 247 653 127
VEL SATIS	Automatic gearbox	●	●	●	●	●	●	●	○	748 015 057 248
VEL SATIS	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 752 632 366 567 319 137 502 247 566
VEL SATIS	Air conditioning	●	●	●	●	●	●	○	●	748 247 237 624 177 125 299 653
VEL SATIS	A. B. S.	●	●	●	●	●	●	●	●	573 752 748 117 247 650 284 519 004
VELSATIS PH2	UCH	●	●	●	●	●	●	○	●	642 226 748 009 629 286 097 475 571 426 252 247 487 060 328 364 624 656 058 291 297 362 294 653 593 374 054 557 498 210 555 172 296 625 194 162 284 293 164
VELSATIS PH2	Radio	●	○	○	○	○	○	○	○	
VELSATIS PH2	Parking prox can	●	●	●	●	○	●	○	●	752 107 748 247 268 255 609 649 083
VELSATIS PH2	Parking brake	●	●	●	●	●	●	●	●	100 748 546 658 542 247 645
VELSATIS PH2	Parking assistance	●	●	●	●	○	●	○	●	107 748 247 609 649 083
VELSATIS PH2	Lighting	●	●	●	●	●	●	○	●	597 748 247 569 170 059 196 653
VELSATIS PH2	Instrument panel	●	●	●	●	●	●	○	●	245 635 403 402 401 400 748 247 101 552 150 284 364 062 626 617 421 175 656 278 653 627 352 434 407 410 408 435 628 600 006 521
VELSATIS PH2	Injection	※	※	※	※	※	※	※	※	043 589 277 588 748 367 463 324 660 633 166 311 478 102 543 203 659 208 478 247 474 215 199 247 605 036
VELSATIS PH2	Heater	●	●	●	●	●	●	○	○	247 231 232
VELSATIS PH2	Hands-free kit	●	●	●	●	●	●	○	●	100 053 561 376 748 752 247 350
VELSATIS PH2	Communications unit	●	●	●	●	●	●	○	●	382 748 156 208 247 653
VELSATIS PH2	Automatic gearbox	●	●	●	●	●	●	●	○	383 752 748 015 230 057 248
VELSATIS PH2	Airbag / pretensioners	●	●	●	●	○	●	○	●	748 752 632 366 319 137 502 247 566
VELSATIS PH2	Air conditioning	●	●	●	●	●	●	○	●	748 247 237 624 177 125 299 653
VELSATIS PH2	A. B. S.	●	●	●	●	●	●	●	●	305 115 056 464 573 752 650 748 117 092 618 583 247 650 284 519 004
WIND	Variable P. A. S.	○	○	○	○	○	○	○	○	
WIND	UCH	○	○	○	○	○	○	○	○	
WIND	Sunroof control unit	○	○	○	○	○	○	○	○	
WIND	Radio	※	※	※	※	※	※	○	※	751 247 527 156 596
WIND	Multimedia interface	○	○	○	○	○	○	○	○	
WIND	Multimed. connection	○	○	○	○	○	○	○	○	
WIND	Instrument panel	○	○	○	○	○	○	○	○	
WIND	Injection	●	●	●	●	●	●	○	●	367 660 633 311 543 659 474 247

Special Function

Index	Special Function Name	Index	Special Function Name
001	100 Ah traction battery	002	3-button key
003	ABS type	004	ABS/ESP calibration
005	ADAC configuration	006	ADAC display type
007	ADAPTIVES AFTER REGENERATING PARTICLE FILTER	008	ADAPTIVES ON EGR VALVE FAULT
009	AERIAL TEST	010	Abandon key reallocation
011	Abandon programming	012	Acceleration sensor
013	Activate EVAP programming	014	Activate maintenance mode
015	Actuators sequential control	016	Adaptive cruise control
017	Adaptive value - A/F ratio	018	Adaptive value - TPS
019	Adaptives after replacing cabin filter	020	Adaptives on air intake flap fault
021	Adblue Backflow Pump Test	022	Adblue Injector Programming
023	Adblue Injector Release Test	024	Adblue dosing module catalyst
025	Adblue emptying test	026	Adblue first filling test
027	Adblue large volume test metering	028	Adblue leak test
029	Adblue pressure preparation test	030	Adblue pump module programming
031	Adblue small quantity test metering	032	Adblue spray test
033	Adblue tank programming	034	Additional heating
035	Adjust oil change counter	036	Air conditioning
037	Air conditioning connection fault finding	038	Air conditioning programming
039	Air conditioning type	040	Air conditioning with wire connection
041	Air damper valve programming	042	Air flowmeter programming
043	Air path programming	044	Alarm
045	Alcohol level prog.	046	Alternator floating voltage
047	Alternator setpoint voltage	048	Alternator type
049	Amplifier reset	050	Analogic display fuel gauge calibration
051	Anti-theft alarm trigger S/W	052	Assisted engagement when stationary
053	Audio links test	054	Auto locking warning sound
055	Auto locking when driving function	056	Auto stop lights illumination authorisation
057	Auto-adaptives	058	Automatic closing of windows (by card)
059	Automatic fold-down headlights	060	Automatic folding of door mirrors
061	Automatic gearbox control	062	Automatic handbrake
063	Automatic lighting function	064	Automatic locking when driving
065	Automatic relocking	066	Automatic seat recall
067	Automatic wiping function	068	Avantime (F4R): with heated windscreen
069	Avantime (F4R): without heated windscreen	070	Avantime(except F4R):with heated windscr.
071	Avantime(expt F4R):without heated windscr.	072	Average air temperature
073	B/C with fr/rr thorax + head airbags	074	B/C with front thorax + head airbags
075	B/C without side airbags	076	BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION
077	BEHR PROBE configuration	078	BII type
079	BLEEDING THE BRAKING SYSTEM	080	BMS
081	BRAKE LINING FRICTION LEARNING	082	BUZZER
083	BUZZER VOLUME	084	Battery charge warning information
085	Battery corrosion counter	086	Battery cycle counter
087	Battery cycle counter estimated	088	Battery cycle counter memorised
089	Bleed hydraulic unit and braking circuits	090	Bodywork type
091	Boiler	092	Brake pressure offset sensor
093	CARD ACCUMULATOR CHARGE TESTER	094	CARD BATTERY CHARGE TESTER
095	CARD TESTING	096	CD changer and auxiliary input
097	CHECK CARDS	098	CHECKING A KEY
099	COMMERCIAL VEHICLE IDLE SPEED MODIFICATION	100	COMPUTER CALIBRATION AND OPERATION
101	CRUISE CONTR./SP. LIMIT. Speed DIFF.	102	Cabin filter regeneration
103	Calculate battery wear counters	104	Calibration
105	Camshaft sensor No.2 programming	106	Camshaft sensor programming
107	Caravan towing distance	108	Card locking
109	Card reminder warning	110	Card/key
111	Catalytic converter	112	Catalytic converter test
113	Change in triggering limit	114	Charge plug
115	Chassis wear programming	116	Check motor torque by ABS
117	Check target teeth	118	Childproof lock
119	Clock	120	Clutch initial closed position
121	Clutch wear	122	Coded diesel solenoid valve engine immobiliser

Index	Special Function Name	Index	Special Function Name
123	Column steering lock	124	Comp configuration
125	Compressor type	126	Computer address
127	Computer calibration	128	Computer configuration
129	Computer initialisation	130	Computer reinitialisation
131	Computer reset	132	Config. without recycling flap auto-setting
133	Configuration Privee 3	134	Configuration Privee 4
135	Configuration Reservee 1	136	Configuration Reservee 10
137	Configuration of system components	138	Configuration privee 1
139	Configuration privee 2	140	Configuration with recycling flap auto-setting
141	Confirm programming	142	Consumption measurement units
143	Control Headlight Motors	144	Control panel type
145	Converter lock up adaptive	146	Cornering lights
147	Corrosion battery counter estimated	148	Corrosion battery counter memorised
149	Country model	150	Cruise CTRL/SPD Limiter
151	Cruise control/speed limiter	152	Cruise control/speed limiter programming
153	Cruise ctrl/speed limiter	154	Curtain side air bag, driver's side
155	Curtain side air bag, passenger side	156	Customer settings and details
157	Cylinder 1 Injector Code	158	Cylinder 2 Injector Code
159	Cylinder 3 Injector Code	160	Cylinder 4 Injector Code
161	DTC reset	162	Daytime running lights
163	Deactivate maintenance mode	164	Deadlocking
165	Deadlocking with remote control on key	166	Decrement idle speed
167	Diesel engine immobiliser	168	Diesel injection
169	Diesel/petrol ENG immob without coded SOL valve	170	Dipped headlights raise
171	Directional headlights	172	Discharge Lamp
173	Distance before next oil change	174	Distance before next oil change configuration
175	Distance units	176	Door unlocking mode
177	Drive ratio	178	Drive type configuration
179	Driver front air bag circuit 1	180	Driver front air bag circuit 2
181	Driver lap strap pretensioner	182	Driver start counter
183	Driver's side rear frontal airbag	184	Driver's LAP STRAP/SEAT airbag
185	Driver's front airbag	186	Driver's front buckle pretensioner
187	Driver's front side impact sensor	188	Driver's lateral sensor
189	Driver's seat buckle sensor	190	Driver's seat position sensor
191	Driver's seat sensor	192	Driver's side rear inertia reel
193	Driver's side rear strap sensor	194	Driving type
195	Driving water pump	196	Dynamic correction
197	EC5 air bag	198	EEPROM memory write procedure
199	EGR adaptives	200	EGR bypass programming
201	EGR programming	202	EGR valve programming
203	ENTER INJECTOR CODES	204	ESM Activation command
205	ESM configuration	206	ESM inhibition command
207	ESP sensor programming	208	Ecu Memory
209	Eeprom probe configuration	210	Electric child safety
211	Electric power assisted steering	212	Electric pump unit
213	Emergency call number	214	End of key reallocation validation
215	Engine adaptives	216	Engine immobiliser
217	Engine immobiliser 2	218	Engine immobiliser authorisation
219	Engine immobiliser prohibition	220	Engine parameter adaptives
221	Engine torque control function	222	Engine type
223	Engine/gearbox type	224	Enter access code
225	Enter injector calibration data	226	Enter recommended pressures
227	Enter vin code	228	Erase Idle regulation adaptives
229	Erase OBD fault memory	230	Erase auto-adaptive values
231	Erase incorrect cranking counter	232	Erase overheating counter
233	Erase stored misalignment	234	Esp automatic reconnection threshold
235	Espace: with evaporator sensor	236	Espace: without evaporator sensor
237	Evaporator temperature sensor	238	Exhaust flap low setting
239	Exhaust injector circuit	240	External components
241	External temperature	242	External temperature sensor
243	FAST IDLE SPEED MODIFICATION	244	FROST MANAGEMENT MODE
245	FUEL GAUGE CALIBRATION	246	Fan assembly
247	Fault memory	248	Fault/s memorised
249	Fixed rear screen	250	Flashing buzzer
251	Flywheel target programming	252	Following tyre change

Index	Special Function Name	Index	Special Function Name
253	Free shift	254	Front buckle pretensioners
255	Front buzzer volume	256	Front detection
257	Front fog lights	258	Front left-hand buckle pretensioner
259	Front left-hand chest-level side airbag	260	Front left-hand inertia wheel
261	Front right-hand buckle pretensioner	262	Front right-hand chest-level side airbag
263	Front right-hand inertia wheel	264	Front seat belt retractors
265	Front slide learning	266	Front thorax side air bag, driver side
267	Front thorax side air bag, passenger side	268	Front tone setting
269	Front wheel circumference	270	Fuel flow regulator
271	Fuel gauge calibration LCD (Japan)	272	Fuel gauge calibration needle (Japan)
273	Fuel level display update	274	Fuel pump programming
275	Fuel sender calibration (DOI).	276	Fuel sender calibration (EUROPE)
277	Fuel supply prevention	278	Fuel type
279	G/S with head airbags	280	G/S without head airbag
281	GEOGRAPHICAL ZONE	282	Gas reserv. capac.
283	Gear change paddles	284	Gearbox type
285	Gearbox vehicle acceleration sensor init.	286	HANDS-FREE SYSTEM TEST
287	HFM programming routine	288	HOKURIKU probe configuration
289	HP TURBINE BYPASS SOLENOID VALVE PROGRAMMING	290	Hands free
291	Hands free locking	292	Hands-free deadlocking
293	Hands-free function	294	Hands-free start-up
295	Hazard lamps recall on TRF	296	Hazard warning lights illumination by ABS
297	Headlight washers	298	Heated rear screen indicator light circuit
299	Heated windscreen	300	Heating resistor type
301	High pressure circuit leak test	302	High pressure pump counter
303	Hill start	304	Hour setting
305	Hydraulic brake compensation	306	IDLE AIR VOLUME LEARNING - FACTORY MODE
307	IDLE AIR VOLUME LEARNING - SERVICE MODE	308	IGNITION TIMING ADJUSTMENT
309	INITIALISATION AFTER AUTOMATIC CONFIGURATION	310	INSTRUMENT PANEL TYPE
311	INTERVAL OF OIL CHANGE (OCS) OXIDATION	312	Idle air volume learning - factory mode
313	Idle air volume learning - service mode	314	Idle speed learning
315	Idle speed setting decrementation	316	Idle speed setting incrementation
317	Idle stop and start counter	318	Igniters in series configuration
319	Ignition module configuration	320	Illuminate hazard lamps upon impact
321	Impact information connection	322	Improved grip function
323	Increase fuel warning threshold	324	Increment of idle speed
325	Indicator light configuration	326	Inhibit EVAP strategy
327	Inhibition of 4-wheel drive function	328	Inhibition of selective door opening
329	Injection prohibition	330	Injection pump adaptatives
331	Injection time programming	332	Injector adaptives
333	Injector adaptives No. 1	334	Injector adaptives No. 2
335	Injector adaptives No. 3	336	Injector adaptives No. 4
337	Instrument panel	338	Interior Ambience lighting
339	Interior lighting	340	Inverter fan assembly
341	J with side AB W/O rear chest AB	342	K/L with F chest + curt airbags
343	K/L with f/R chest + curt airbags	344	K/L without side airbags
345	KEY ASSIGNMENT	346	Key programming
347	Key type	348	LCD display fuel gauge calibration
349	LOCK LATCH LOCKING	350	Language
351	Language configuration	352	Language version
353	Launch Control Counter	354	Left Hand Drive / 4 cylinder configuration
355	Left Hand Drive / 6 cylinder configuration	356	Left Hand Drive / diesel configuration
357	Left hand drive	358	Left-hand curtain airbag
359	Left-hand drive	360	Left-hand side impact sensor
361	Lever locking connection fault finding	362	Light sensor sensitivity
363	Light sensor signal	364	Lights automatic illumination
365	Load Area	366	Lock computer
367	Lock injector control	368	Longitudinal acceleration sensor
369	Longitudinal acceleration sensor offset	370	Low pressure EGR valve programming
371	Lumbar learning	372	Manifold pressure sensor programming
373	Memorisation of speeds	374	Memorising driver's seat position
375	Memory saved	376	Microphone test
377	Mode number	378	Modification of parameters after initialisation
379	Module change	380	Multiplexed network configuration
381	Navigation system	382	Netherlands legislation

Index	Special Function Name	Index	Special Function Name
383	Neutral position programming	384	New vehicle storage mode deactivation
385	No ABS	386	Noise-reducing microphone
387	Note oil wear counter	388	Number of cylinders configuration
389	Number of heating elements	390	Number of starting
391	Number of starting 1	392	Number of starting 2
393	Number of starting 3	394	Number of starting 4
395	Number of starting cycles	396	OBD memory
397	OIL CHANGE INTERVAL (OCS): DILUTION	398	Oil change counter offset
399	Oil change counter reset	400	Oil change interval in KM
401	Oil change interval in months	402	Oil change range:current value in KM
403	Oil change range:current value in months	404	Oil level displayed 20 sec when ADAC pressed
405	Oil level displayed 20sec	406	Oil measurement
407	Oil measurement timer	408	Oil pressure warning threshold
409	Oil service and odometry miles - Km	410	Oil temperature measurement threshold
411	Oil vapour heater	412	One-Touch Electric Window(s) / Sunroof
413	One-touch central door locking button	414	One-touch electric window(s)
415	Opening elements central locking	416	Opening rear screen
417	Other at	418	Other manual
419	Overspeed Alarm	420	Overspeed alarm for arabia
421	Overspeed function - arabia	422	Overspeed light
423	P9X AT	424	P9X MANUAL
425	PREPARATION BEFORE AUTOMATIC CONFIGURATION	426	PROGRAMMING THE CODES OF THE FOUR VALVES
427	Parametrage prive 1	428	Parametrage prive 2
429	Parametrage prive 250	430	Parametrage prive 3
431	Parametrage prive 4	432	Parametrage prive 9
433	Parking aid	434	Parking proximity sensor function
435	Particle filter	436	Particle filter adaptives
437	Particle filter pressure diff. sensor	438	Particle filter relative pressure sensor
439	Pass airbag deactivation warning light	440	Passenger air bag locking mode
441	Passenger compartment heating resistor	442	Passenger front air bag circuit 1
443	Passenger front air bag circuit 2	444	Passenger lap strap pretensioner
445	Passenger presence detection sensor	446	Passenger side rear frontal airbag
447	Passenger side rear strap sensor	448	Passenger's LAP strap/seat airbag
449	Passenger's front airbag	450	Passenger's front buckle pretensioner
451	Passenger's front side impact sensor	452	Passenger's lateral sensor
453	Passenger's seat buckle sensor	454	Passenger's side rear inertia reel
455	Personalised oil change frequency	456	Petrol injection
457	Power assisted steering	458	Power back door cylinder
459	Power steering electric pump unit	460	Power-assisted steering program
461	Preheating prevention	462	Pressure regulation adaptives
463	Prevention of electrical consumers	464	Prevention of stop light auto illumination
465	Program body computer	466	Program clutch 1 adjustment
467	Program clutch 2 adjustment	468	Program clutch adjustment
469	Program clutch assembly	470	Program clutch open position
471	Programme clutch position	472	Programme pneumatic suspension
473	Programme slip point	474	Programmed values
475	Programming a valve code	476	Programming of seat stops
477	Programming or reallocation of keys	478	Programming reinitialisation
479	Programming routine	480	Programming selection/engaging zones
481	Programming throttle limits	482	Programming with 1 key
483	Programming with 2 keys	484	Proportional richness sensor programming
485	Pulling correction	486	Pulling correction program
487	RAIN/Luminosity Sensor Type	488	READ CARD SIGNAL
489	READ VALVE SET AND MEMORISED CODES	490	READING THE VALVE SET AND VALVE CODES
491	REAR LEFT-HAND INERTIA WHEEL	492	REVERSING CAMERA CALIBRATION
493	Radiofrequency type	494	Raid function authorisation
495	Raid function authorisation by diag	496	Rail pressure sensor adaptives
497	Rain sensor	498	Rain/light sensor
499	Raising of elect. window(with ANTI-PINCH)	500	Range extender
501	Read card 2 signal	502	Reading impact contexts
503	Rear access aerials	504	Rear brake unit initialisation
505	Rear brake unit repositioning	506	Rear detection
507	Rear inertia reels	508	Rear loud speaker
509	Rear right-hand inertia reel	510	Rear screen demister
511	Rear screen wiper	512	Rear shelves

Index	Special Function Name	Index	Special Function Name
513	Rear slide learning	514	Rear thorax side air bag, driver side
515	Rear thorax side air bag, passenger side	516	Rear wheel circumference
517	Reinstatement of 4-wheel drive function	518	Remote Locking Buzzer
519	Remote control cruise control	520	Remote engine starting
521	Reserve capacity	522	Reset
523	Reset clutch data	524	Reset clutch data protection
525	Reset gearbox data	526	Reset oil change counter
527	Reset radio	528	Resetting internal protection
529	Restart the computer	530	Rev counter
531	Rheostat lighting	532	Rheostat presence
533	Richness regulation programming	534	Right Hand Drive / 4 cylinder configuration
535	Right Hand Drive / 6 cylinder configuration	536	Right Hand Drive / diesel configuration
537	Right hand drive	538	Right-hand curtain airbag
539	Right-hand side impact sensor	540	Rocker central door locking button
541	Roll bars	542	SAVE CLUTCH PEDAL PROGRAMMING
543	SAVE COMPUTER DATA	544	SDM air bag
545	SDO	546	SLOPE INITIALISATION
547	START OBD TEST: CATALYTIC CONVERTER	548	START OBD TEST: O2 SENSORS
549	SWIRL flap	550	Scandinavian runnings lights
551	Seat belt light	552	Seat belt reminder buzzer
553	Seat belt warning module	554	Second fitting alarm
555	See-me-home lighting	556	Selection of valve set
557	Selective opening of doors	558	Selector lever locking
559	Sensor offsets	560	Sensor type
561	Serial link test	562	Shift drum reference position
563	Shift fork	564	Shoe lining energy counter
565	Side detection	566	Side on which steering wheel fitted
567	Side sensor configuration	568	Siemens probe configuration
569	Signature	570	Slope sensor adjustment
571	Spare	572	Speed limiter
573	Speedo index	574	Start authorisation from BMS
575	Start authorisation from BMS safety	576	Starter adaptatives
577	Starter wear counter	578	Starting authorization
579	Static/autoconfiguration test	580	Steering angle offset
581	Steering angle sensor initialisation	582	Steering lock
583	Steering wheel angle offset sensor	584	Steering wheel angle sensor
585	Steering wheel angle sensor programming	586	Stop and start configuration
587	Stop and start function	588	Stop electrical consumer prevention
589	Stop fuel supply prevention	590	Stop preheating prevention
591	Stop/start function configuration	592	Stored energy management data
593	Sunroof	594	Sunroof control unit
595	Swirl flap programming	596	System configuration
597	System initialisation	598	TYPE N4
599	Tailgate flap	600	Tank capacity
601	Temperature display	602	Temperature units
603	Test parameters	604	Testing card presented
605	Thermoplungers	606	Time format
607	Timed lighting supply	608	Timer courtesy light
609	Tone adjustment	610	Torque learning
611	Touch screen	612	Toxicity sensor
613	Traction battery interlock	614	Traction battery lock
615	Trailer present	616	Trailer stability function
617	Trajectory control	618	Transverse acceleration offset sensor
619	Transverse acceleration sensor	620	Tuning version number
621	Turbocharger programming	622	Type 1 Unit
623	Type 2 unit	624	Type of power steering
625	Tyre pressure monitor function	626	Tyre pressure monitoring
627	Tyre pressure units	628	UCH
629	UCH connections test -> card reader	630	UPC COMP. TYPE
631	Uch type	632	Unlock computer
633	Unlock injector control	634	Unlocking mode. doors hands free
635	Update odometer	636	Upstream oxygen sensor
637	V4Y AUTOMATIC GEARBOX	638	V4Y MANUAL
639	VALVE CODE READING	640	VEH. speed at initialisation
641	Vacuum pump operation request	642	Valve set selection

Index	Special Function Name	Index	Special Function Name
643	Van fast idle speed decrease	644	Van fast idle speed increase
645	Vehicle configuration	646	Vehicle engine type
647	Vehicle family	648	Vehicle function programming
649	Vehicle identification	650	Vehicle parameters
651	Vehicle speed limitation function	652	Vehicle speed signal transmitter
653	Vehicle type	654	Vehicle type: JEOE or JEOP
655	Vehicle type: all types except JEOP/JEOE	656	Voice synthesiser
657	W FR chest airbags w/out head-lvl airbags	658	WRITE CLUTCH PEDAL PROGRAMMING
659	WRITE SAVED DATA	660	WRITE V. I. N.
661	WRITING OF INSTRUMENT PANEL DATA FOR INJECTION	662	Waste gate regulation
663	Windscreen type	664	Wiper intermittent speed ring
665	With ABS	666	With AC (fixed capacity compressor)
667	With AC (variable capacity compressor)	668	With ADAC
669	With FR chest airbags+head-level airbags	670	With INFRA-RED remote control
671	With OBD	672	With SDO
673	With SWIRL flap	674	With air CON / without heated windscreen
675	With air bag	676	With air conditioning
677	With air conditioning / with heated windscreen	678	With alarm
679	With automatic RE-LOCKING	680	With automatic transmission
681	With boiler	682	With catalytic converter
683	With coolant sensor	684	With cruise control
685	With evaporator temperature sensor	686	With fuel pump cut-out
687	With harrison type compressor	688	With hazard lamps recall on TRF
689	With hazard lights upon impact	690	With heated rear screen
691	With manual gearbox	692	With one-touch type control
693	With overspeed warning	694	With passenger's airbag
695	With passenger's airbags	696	With permanent type control
697	With power assisted steering	698	With power steering electric pump unit
699	With radio display	700	With radio frequency remote control
701	With range extension	702	With recycling motor timer
703	With running lights	704	With sanden type compressor
705	With self levelling suspension	706	With side airbags
707	With tailgate module	708	With thermoplungers
709	With timed courtesy light	710	With variable w'screen wiper intermittent
711	Without ADAC	712	Without OBD
713	Without SDO	714	Without SWIRL flap
715	Without air CON / with heated windscreen	716	Without air CON. / without heated windscreen
717	Without air bag	718	Without air conditioning
719	Without airbags (pretensioners only)	720	Without alarm
721	Without automatic RE-LOCKING	722	Without automatic transmission
723	Without boiler	724	Without catalytic converter
725	Without coolant sensor	726	Without cruise control
727	Without evaporator temperature sensor	728	Without fuel pump cut-out
729	Without hazard lamps recall on TRF	730	Without hazard lights upon impact
731	Without heated rear screen	732	Without overspeed warning
733	Without passenger seat	734	Without passenger's airbag
735	Without passenger's frontal airbag	736	Without power assisted steering
737	Without power steering electric pump unit	738	Without radio display
739	Without range extension	740	Without recycling motor timer
741	Without running lights	742	Without self levelling suspension
743	Without side airbags	744	Without tailgate module
745	Without thermoplungers	746	Without timed courtesy light
747	Without variable intermittent wipe	748	Write VIN
749	Write clutch initial closed position	750	Write date new clutch fitted
751	Write date of after sales operation	752	Write date of last after sales operation
753	Write transmission oil change date	754	Writing conformity
755	km	756	miles